EXR-21/XR-6450

SERVICE MANUAL

US Model
EXR-21

US Model
Canadian Model
E Model
XR-6450

Photo : XR-6450

Model Name Using Similar Mechanism	XR-C410
Tape Transport Mechanism Type	MG-50EX-39

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION
8 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1% total harmonic distortion.

Other Specifications

Cassette player section

Tape track	4-track 2-channel stereo
Wow and flutter	0.08 % (WRMS)
Frequency response	30 – 18,000 Hz
Signal-to- noise ratio **(XR-6450)**	

Cassette type	Dolby NR off	Dolby B NR
TYPE II, IV	61 dB	67 dB
TYPE I	58 dB	64 dB

Signal-to- noise ratio 58 dB (EXR-21)

Tuner section

FM

Tuning range	87.5 – 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	65 dB (stereo), 70 dB (mono)
Harmonic distortion at 1 kHz	0.5 % (stereo), 0.3 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	2 dB

AM

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 µV

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	20 W × 4 (at 4 ohms) **(XR-6450)**
Maximum power output	15 W × 4 (at 4 ohms) **(EXR-21)**

— Continued on page 2 —

使用時は添付資料も参照のこと
Refer to the additional documents.

FM/AM CASSETTE CAR STEREO

SONY®

General

Output lead	Power antenna relay control lead Power amplifier control lead
Tone controls	Bass ±8 dB at 100 Hz Treble ±8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 × 58 × 176 mm (7 1/2 × 2 3/8 × 7 in.) (w/h/d) not incl. projecting parts and controls
Mounting dimension	Approx. 182 × 53 × 155 mm (7 1/4 × 2 1/8 × 6 1/8 in.) (w/h/d) not incl. projecting parts and controls
Mass	Approx. 1.2 kg (2 lb. 10 oz.)
Supplied accessories	Power connecting cord (1) Mounting hardware (1 set) Front panel case (1)

Design and specifications are subject to change without notice.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

XR-6450 only

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

TABLE OF CONTENTS

Section *Title* *Page*

1. GENERAL
Features ····· 3
Location of Controls ····· 3
Cassette Player Operation ····· 5
Radio Reception ····· 5
Other Functions ····· 6
Installation ····· 8
Connections ····· 10

2. DISASSEMBLY
2-1. Installing the Loading Gears ····· 11
2-2. Installing the Reel Bracket ····· 11
2-3. Installing the Mode Lever and Pinch Levers ····· 12
2-4. Installing the Cassette Housing ····· 13
2-5. Installing the Loading Lever ····· 13
2-6. Positioning the Loading Lever ····· 14
2-7. Installing the Gear (Loading F) ····· 14

3. ADJUSTMENTS ····· 15

4. ELECTRICAL ADJUSTMENTS ····· 15

5. DIAGRAMS
5-1. Block Diagram ····· 20
5-2. Printed Wiring Boards ····· 22
5-3. Schematic Diagram ····· 25
5-4. IC Block Diagram ····· 30

6. EXPLODED VIEWS
6-1. Chassis Section ····· 32
6-2. Front Panel Section ····· 33
6-3. Mechanism Deck Section (MG-50EX-39) ····· 34

7. ELECTRICAL PARTS LIST ····· 35

Features

General

- **Detachable-front panel** enables you to take the front panel away with you when you leave your car.
- **Caution alarm** will be activated if you turn off the ignition key without removing the front panel from the unit.
- Provided with a **digital 12-hour clock.**
- **Built-in power amplifier (max. output: 20 W × 4 ch)** enables you to enjoy a 4-speaker system.

Cassette player section

- **Dolby B NR* system** reduces hiss noise during tape playback.
- **Intro scan function** for playing the first 10 seconds of each track.
- **Repeat play function** for playing back a track repeatedly.
- **ATA (Automatic Tuner Activation)** for automatically turning on the tuner while fast-forwarding or rewinding a tape.
- **Blank skip function** for automatically skipping blanks during tape playback.

* *Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.*
"DOLBY" and the double-D symbol DD are trademarks of Dolby Laboratories Licensing Corporation.

(XR-6450)

Tuner section

- Up to 30 stations can be preset: 18 stations on FM and 12 stations on AM.
- **BTM (Best Tuning Memory) function** automatically searches and stores the stations with the strongest signals on the preset number buttons in order of frequency.

Location of Controls

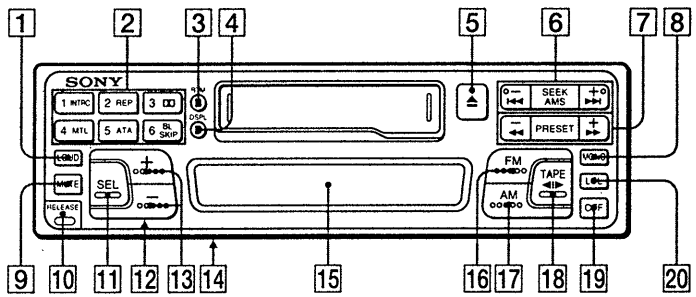

Refer to the pages in ● for details.

1 LOUD (loudness) button ❾

2 During radio reception:
Preset number buttons ❽

During tape playback:

- 1 INTRO INTRO button ❼
- 2 REP REPEAT button ❼
- 3 DD DD (Dolby B NR) button ❻ (XR-6450)
- 4 MTL MTL (Cassette type select) button ❻ (XR-6450)
- 5 ATA ATA (Automatic Tuner Activation) button ❼
- 6 BL SKIP BL.SKIP button ❼❿

3 BTM (Best Tuning Memory) button ❽

4 DSPL (display mode change/time set) button ❺

5 ⏏ (eject) button ❻❾

6 SEEK/AMS button ❻❼

7 PRESET button ❻❼❽❾

8 MONO button ❼

9 MUTE button ❾

10 RELEASE (front panel release) button ❹❿

11 SEL (control mode select) button ❺❾❿

12 Reset button (located on the front side of the unit hidden by the front panel) ❹
Press this button when you use this unit for the first time, when you have changed the car battery, or when the buttons of this unit do not function properly.

13 (volume/bass/treble/balance/fader control) button ❺❾

14 POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the installation/connections manual.

15 Display window

16 FM (radio on/band select) button ❻❼❽

17 AM (radio on/band select) button ❻❼❽

18 TAPE/◀I▶ (playback/transport direction change) button ❻

19 OFF button ❹❺❾

20 LCL (local seek adjust) button ❼

SECTION 1
GENERAL

This section is extracted from XR-6450 instruction manual.

Precautions

- Before operating the unit for the first time or after replacing the car battery, press the reset button with a ball-point pen etc., and then start operating the unit.



Reset button

- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- If no sound comes from the speakers of a 2-speaker system, set the fader control to the center position.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Notes on Cassettes

Cassette care

- Do not touch the tape surface of a cassette, as any dirt or dust will contaminate the heads.
- Keep cassettes away from equipment with built-in magnets such as speakers and amplifiers, as erasure or distortion on the recorded tape could occur.
- Do not expose cassettes to direct sunlight, extremely cold temperatures or moisture.
- When the tape is played back for a long period, the cassette shell may become warm because of the built-in power amplifier. However, this is not a sign of a malfunction.

Cassettes longer than 90 minutes

The use of cassettes longer than 90 minutes is not recommended except for long continuous play. The tapes used for these cassettes are very thin and tend to be stretched easily. Frequent playing and stopping of these tapes may cause them to be pulled into the cassette deck mechanism.

Detaching and Attaching the Front Panel

The front panel of this unit can be detached in order to prevent the unit from being stolen.

Detaching the Front Panel

Before detaching the front panel, be sure to press the OFF button first. Then press the RELEASE button to open up the front panel and detach the panel by pulling it towards you as illustrated.

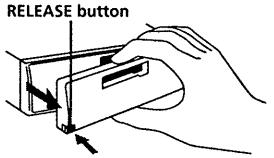

Be sure not to drop the panel when detaching it from the unit.

Attaching the Front Panel

Apply the right hand side of the front panel to the unit by attaching part Ⓐ of the front panel to part Ⓑ of the unit as illustrated and push until it clicks.

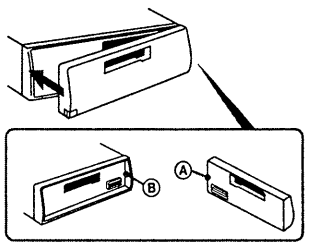

Notes

- *Make sure that the front panel is the right way up when attaching it to the unit as it cannot be attached upside down.*
- *Do not press the front panel hard against the unit when attaching it to the unit. It can easily be attached by pressing it lightly against the unit.*
- *When you carry the front panel with you, put it in the supplied front panel case.*
- *Do not press hard or give excessive pressure to the display windows of the front panel.*
- *Before removing the front panel, be sure to turn the power off. However, if you press the RELEASE button to detach the panel while the unit is still turned on, the power will be automatically turned off in order to protect the speakers from being damaged.*
- *Do not expose the front panel to direct sunlight, heat sources such as hot air ducts or leave it in a humid place. Never leave it on the dashboard etc. of a car parked in direct sunlight where there may be a considerable rise in temperature inside the car.*

Caution alarm

If you turn the ignition key to the OFF position without removing the front panel, the caution alarm will be activated and a beep tone will be heard for a few seconds (only when the POWER SELECT switch is set to the Ⓐ position).

Setting the Clock

The clock has a digital indication.

For example, setting it to 10:08

1 Display the time.
(Press the OFF or the DSPL Ⓓ button during the unit operation.)

2 Press the DSPL Ⓓ button for more than two seconds.



The hour digit blinks.

Set the hour digits.



to go forward

to go back

3 Press the SEL button momentarily.

The minute digit blinks.

Set the minute digits.



to go forward

to go back

4 Press the DSPL Ⓓ button momentarily.

The clock activates.

Note

If the POWER SELECT switch on the bottom of unit is set to the Ⓑ position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio, or started cassette playback.

Cassette Player Operation

Listening to Tape Playback

After inserting the cassette, playback will start automatically.



If a cassette is already inserted, press the [TAPE] button to start playback.
If you press during playback, the tape transport direction will change.

Indication of Tape Transport Direction

The side facing up is being played.

The side facing down is being played.

To stop playback,
eject the cassette by pressing the [⏏] button or press the OFF button.
Playback stops also when you select radio by pressing the [FM] or [AM] button.

Ejecting the Cassette

Press the [⏏] button.

Fast-winding the Tape

Rewind — Fast-forward

To start playback during rewinding or fast-forwarding, press the [TAPE] button.

Playing a Tape Recorded in the Dolby B NR System

Press the [3 DOLBY NR] button when you want to listen to a tape recorded in the Dolby B NR system. → "DOLBY NR" appears in the display.
To cancel, press again.
(XR-6450)

Playing a CrO_2 or Metal Tape

Press the [4 MTL] button when you want to listen to a CrO_2 (TYPE II) or metal (TYPE IV) tape. → "MTL" will appear on the display.
To cancel, press again.
(XR-6450)

Locating the Beginnings of the Tracks

— AMS (Automatic Music Sensor) Function

During playback, press either side of the SEEK/AMS button the number of times you wish to skip the tracks.



To locate the previous tracks — To locate the succeeding tracks

Up to nine tracks can be skipped.

If the blanks between the tracks are shorter than four seconds, or if there are noises, the AMS function will not work. Also, the unit may read long sections of low volume music or quiet sections on a track as blanks between tracks.

Searching the Desired Track — Intro Scan Function

Press the [1 INTRO] button during playback. → "INTRO" appears on the display.
The first 10 seconds of all the tracks are played. When you find the desired track, press the button once more. The unit returns to the normal playback mode.

Playing Tracks Repeatedly

— Repeat Play Function

Press the [2 REP] button during playback. → "REP" appears on the display.
When the currently played track is over, it will be played again from the beginning.
To cancel this mode, press the button again.

Radio Reception during Fast-forwarding or Rewinding of a Tape

— ATA (Automatic Tuner Activation) Function

Press the [5 ATA] button during playback. → "ATA" appears on the display.
When fast-forwarding or rewinding with the [PRESET] button, the tuner will turn on automatically.

Skipping Blanks Automatically during Tape Playback — Blank Skip Function

Press the [6 BL SKIP] button during playback. → "BL.SKIP" appears on the display.
Blanks longer than eight seconds will be automatically skipped during tape playback.

Radio Reception

Searching for the Stations Automatically

— Automatic Tuning

1 Select the desired band.

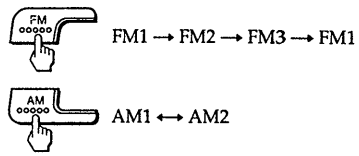

2 Press either side of the SEEK/AMS button to search for the station (automatic tuning).



For lower frequencies — **For higher frequencies**

The scanning stops when a station is received. Press either side of the button repeatedly until the desired station is received.

When an FM stereo program with a sufficient signal strength is tuned in,



The "ST" indication will appear.

To avoid the automatic tuning from stopping on stations too frequently (local seek mode), press the [LCL] button momentarily to get the "LCL" indication.
Only the stations with relatively strong signals can be tuned in. The local seek mode functions only when the automatic tuning is in operation.

If FM Stereo Reception is Poor — Monaural Mode

Press the [MONO] button momentarily. → "MONO" appears on the display.
The sound will improve, but it will become monaural.

Tuning in by Adjusting the Frequency — Manual Tuning

1 Select the desired band.



2 Press and hold either side of the PRESET button.
Release the button when the desired station is received.



For lower frequencies

For higher frequencies

PREVENTING ACCIDENTS!
When tuning in during driving, use the automatic tuning and the memory preset search function instead of the manual tuning.

Memorizing Stations Automatically

— BTM (Best Tuning Memory) Function

This function selects from the currently received band the stations with the strongest signals and memorizes them in order of their frequency.

1 Select the desired band.



2 Press the BTM button for more than two seconds.
- When there is no preset number indicated on the display window, stations will be stored on all preset number buttons on the currently selected band.
- When there is a preset number indicated on the display window, the unit will store stations on all preset number buttons from the one currently displayed.

For example, when you select FM2 and preset number 3 is displayed,
the operation will start from preset number 3 on FM2, and will stop at preset number 6 on FM3.

Memorizing Only the Desired Stations

1 Select the desired band.



2 Tune in the station which you wish to store on the preset number button.

3 Keep the desired preset number button (1 INTRO to 6 BL SKIP) pressed for about two seconds until you hear a beep tone.

The number of the pressed preset number button appears on the display window.

Up to 6 stations on each band (FM1, FM2, FM3, AM1 and AM2 can be stored on the preset number buttons in order of your choice. Therefore, 18 stations can be memorized on FM.
If you try to store another station on the same preset number button, the previously stored station will be erased.

Receiving the Memorized Stations

1 Select the desired band.



2 Press momentarily the preset number (1 INTRO to 6 BL SKIP) button on which the desired station is stored.

Note
If you press the preset number button for more than two seconds, the currently received station will be memorized again. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily.

Press either side of the PRESET button momentarily to receive in order the stations stored in the memory (Preset Search Function).



Press momentarily
1 → 2 → ··· → 5 → 6 → 1 → ···



Press momentarily
1 → 6 → 5 → ··· → 2 → 1 → ···

Other Functions

Adjusting the Sound Characteristics

1 Select the item you want to adjust by pressing the SEL button repeatedly.

VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader) → VOL (volume)

2 Adjust the selected item by pressing either the + button or − button.

Adjust within three seconds after selecting. (After three seconds the button will again serve as volume control button.)

Enjoying Bass and Treble even at Low Volume

— Loudness Function

Press the LOUD button. → "LOUD" will appear on the display.
Bass and treble will be reinforced. To cancel, press again.

Muting the Sound Quickly

— Mute Function

Press the MUTE button. → The "MUTE" indication flashes.
The sound is muted at once. To restore the previous volume level, press again.

This function will be also canceled when:
— the + or OFF button is pressed.
— ejecting a cassette by pressing the ⏏ button during tape playback.

Muting the Beep Tone

Press the [6 BL SKIP] button while pressing the [SEL] button.

To reobtain the beep tone, press these buttons again.

Maintenance

Fuse Replacement

When replacing the fuse, be sure to use one with the correct amperage which is stated on the fuse case. Never use a fuse whose amperage rating exceeds the one supplied to the unit as this could cause a malfunction of the unit.

Warning

Use a fuse with the specified amperage.
Use of a fuse with higher amperage may cause serious damage.

Cleaning the Connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, open the front panel by pressing the RELEASE button, then detach it and clean with a cotton swab which was dipped in alcohol. Do not apply too much force. Otherwise, the connector may get damaged.

Main unit

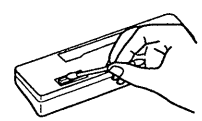

Back of the front panel

Dismounting the Unit

1

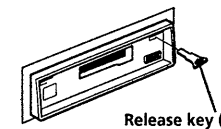

Release key (supplied)

2

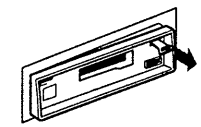

3

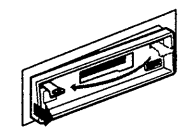

4

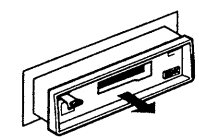

Installation

Precautions

- Do not tamper with the four holes on the upper surface of the unit. They are for tuner adjustments to be done only by service technicians.
- Choose the installation location carefully so that the unit will not hamper the driver during driving.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 20°.

How to Detach and Attach the Front Panel

Before installing the unit, detach the front panel.

To detach

Press the RELEASE button to open up the front panel, then pull it out.

To attach

Align the parts Ⓐ and Ⓑ, and push the front panel until it clicks.

To detach
Retrait

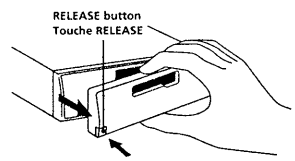

To attach
Pose

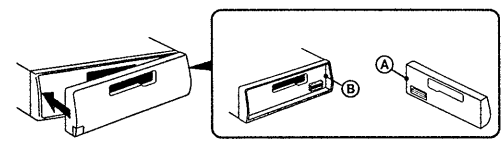

Mounting Example

Installation in the dashboard

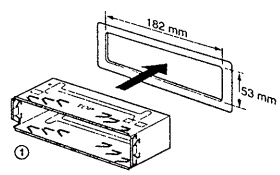

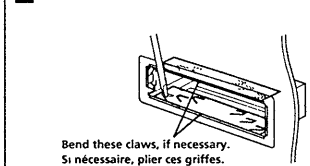

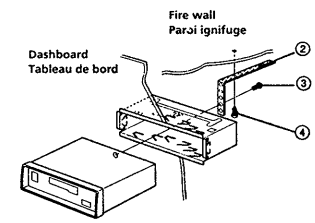

Mounting the Unit in a Japanese Car

This unit may not be installed in some makes of cars. In this case, consult your nearest Sony dealer.

1 Run a blade along the slits on the back of the front trim and cut it off the unit.

Passer une lame le long des fentes à l'arrière de la bordure et la couper.

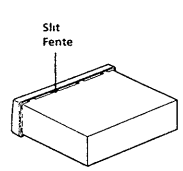

2 TOYOTA

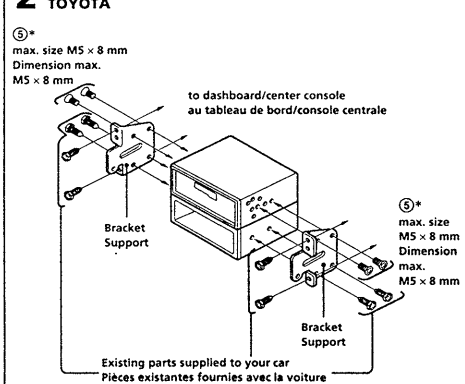

NISSAN

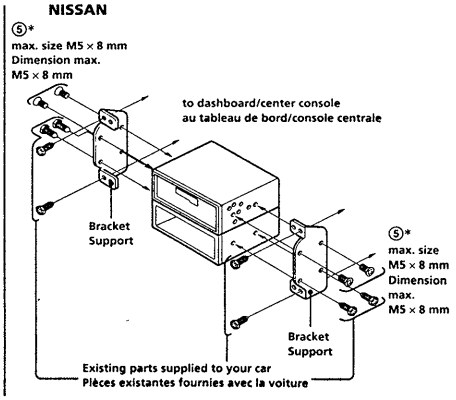

* To the prevent malfunction, install only with the supplied screws ⑤. Do not use an electric or impact screwdriver.

* Pour éviter tout dysfonctionnement, utilisez uniquement les vis ⑤ pour le montage. N'utilisez pas de tournevis électrique ou à percussion.

Installation

Précautions

- Ne pas toucher les quatre orifices sur le panneau supérieur de l'appareil. Ils servent aux réglages du tuner qui ne doivent être effectués que par un technicien.
- Choisir soigneusement l'emplacement de l'installation, pour que l'appareil ne gêne pas la conduite.
- Eviter d'installer l'appareil dans un endroit exposé à des températures élevées, comme en plein soleil ou à proximité d'une bouche d'air chaud, ou à de la poussière, saleté ou vibrations violentes.
- Pour garantir un montage sûr, n'utiliser que le matériel fourni.

Réglage de l'angle de montage

Ajuster l'inclinaison à un angle inférieur à 20°

Retrait et pose du panneau avant

Avant d'installer l'appareil, déposer le panneau avant.

Retrait

Appuyer sur la touche RELEASE pour ouvrir le panneau avant, puis l'enlv.

Pose

Aligner les points Ⓐ et Ⓑ, puis pousser l'appareil jusqu'au déclic.

Exemple de montage

Installation dans le tableau de bord

Installation de l'appareil dans une voiture japonaise

Cet appareil ne peut pas être installé dans certaines voitures. Consultez, dans ce cas, votre concessionnaire Sony.

Connections of Example

Connexions de l'exemple

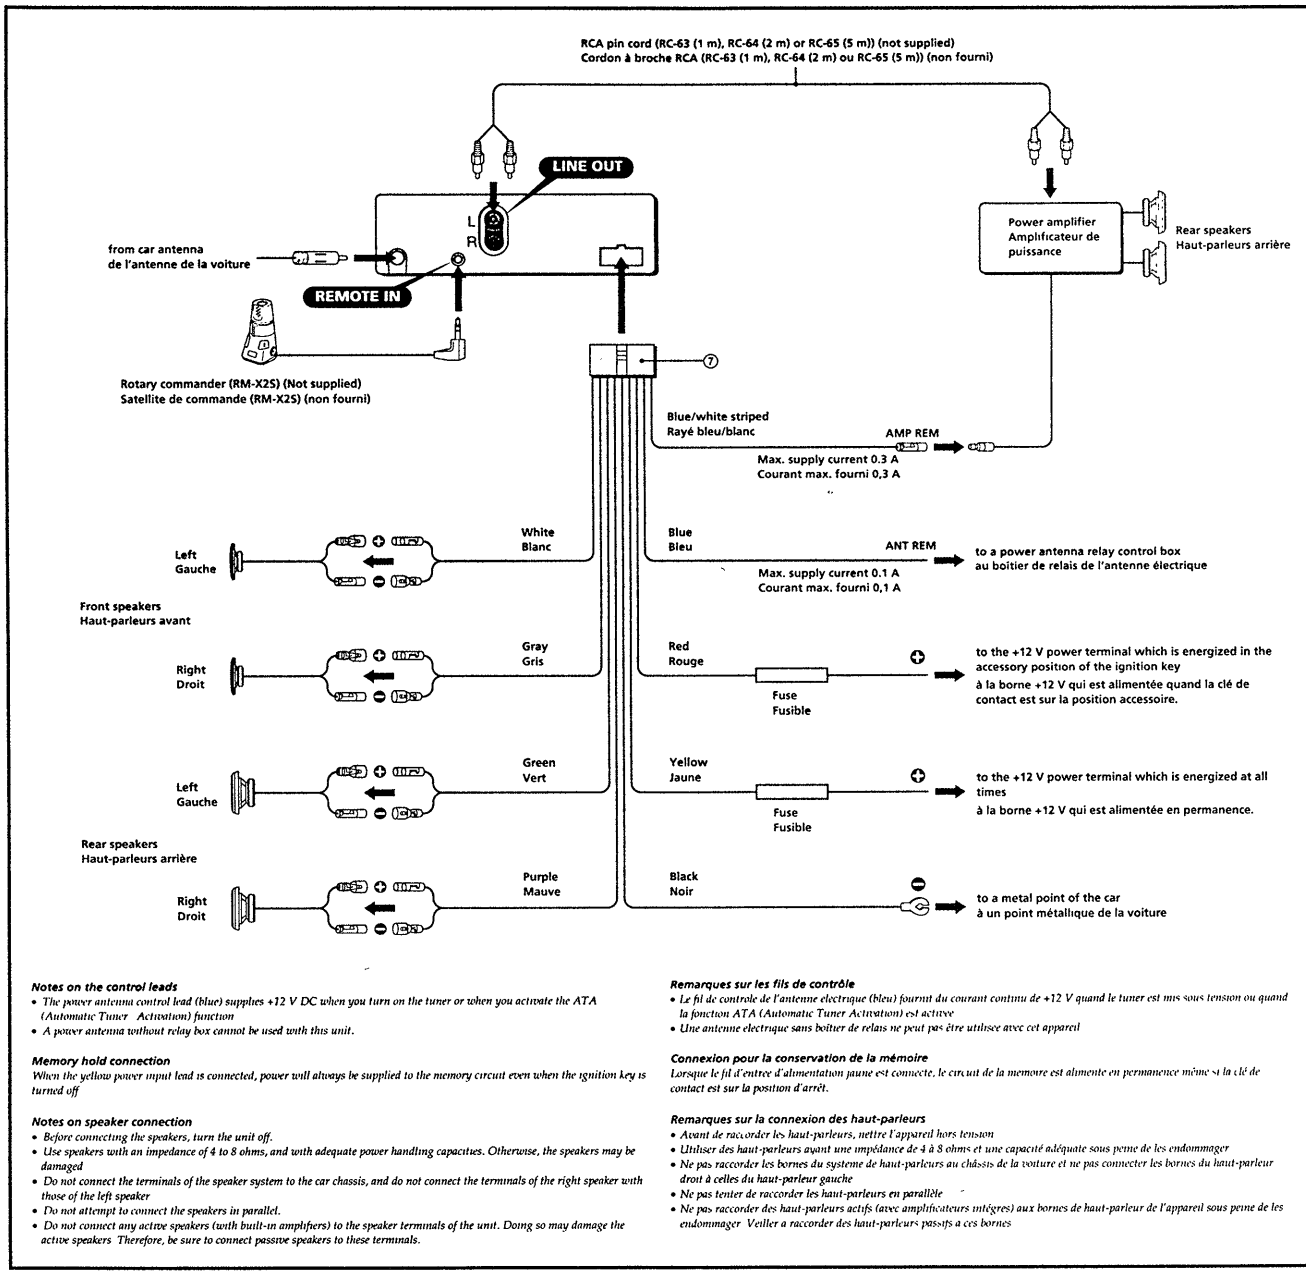

Notes on the control leads

- *The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the ATA (Automatic Tuner Activation) function*
- *A power antenna without relay box cannot be used with this unit.*

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off

Notes on speaker connection

- *Before connecting the speakers, turn the unit off.*
- *Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged*
- *Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker*
- *Do not attempt to connect the speakers in parallel.*
- *Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.*

Remarques sur les fils de contrôle

- *Le fil de contrôle de l'antenne électrique (bleu) fournit du courant continu de +12 V quand le tuner est mis sous tension ou quand la fonction ATA (Automatic Tuner Activation) est activée*
- *Une antenne électrique sans boîtier de relais ne peut pas être utilisée avec cet appareil*

Connexion pour la conservation de la mémoire

Lorsque le fil d'entrée d'alimentation jaune est connecté, le circuit de la mémoire est alimenté en permanence même si la clé de contact est sur la position d'arrêt.

Remarques sur la connexion des haut-parleurs

- *Avant de raccorder les haut-parleurs, mettre l'appareil hors tension*
- *Utiliser des haut-parleurs ayant une impédance de 4 à 8 ohms et une capacité adéquate sous peine de les endommager*
- *Ne pas raccorder les bornes du système de haut-parleurs au châssis de la voiture et ne pas connecter les bornes du haut-parleur droit à celles du haut-parleur gauche*
- *Ne pas tenter de raccorder les haut-parleurs en parallèle*
- *Ne pas raccorder des haut-parleurs actifs (avec amplificateurs intégrés) aux bornes de haut-parleur de l'appareil sous peine de les endommager. Veiller à raccorder des haut-parleurs passifs à ces bornes*

Reset Button

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc.

Touche de réinitialisation

Quand l'installation et les connexions sont terminées, appuyer sur la touche de réinitialisation avec un stylo bille ou un objet pointu.



Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position
- **Run all ground wires to a common ground point.**

If Your Car has No Accessory Position on the Ignition Key Switch — POWER SELECT Switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear **if your car has no accessory position on the ignition key switch.** To avoid this battery wear, **set the POWER SELECT switch located on the bottom of the unit to the ⒷⒶ position, then press the reset button.** The illumination is reset to stay off while the unit is not being played.

Note

The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the ⒷⒶ position.

Connexions

Précautions

- Cet appareil est conçu pour fonctionner sur courant continu de 12 V avec masse négative.
- Avant d'effectuer les connexions, débrancher la borne de terre de la batterie du véhicule pour éviter tout court-circuit.
- Brancher les fils d'entrée d'alimentation **jaune** et **rouge** seulement après avoir terminé tous les autres branchements.
- Veiller à ne pas raccorder le fil rouge d'entrée d'alimentation à la borne positive de 12 V qui est alimentée quand la clé de contact est sur la position accessoire.
- **Rassembler tous les fils de terre en un point de masse commun.**

Si l'appareil est utilisé dans une voiture dont la clé de contact n'a pas de position accessoire — Interrupteur POWER SELECT

L'éclairage du panneau avant est réglé en usine de manière à s'allumer même quand l'appareil ne fonctionne pas. Cependant, ce réglage risque d'épuiser la batterie **si l'appareil est utilisé dans une voiture dont la clé de contact ne possède pas de position accessoire.** Pour éviter d'épuiser la batterie, régler l'interrupteur **POWER sur le socle de l'appareil sur la position ⒷⒶ, puis appuyer sur la touche de réinitialisation.** L'éclairage est réglé pour rester éteint quand l'appareil n'est pas utilisé.

Remarque

Quand l'interrupteur POWER SELECT est réglé sur la position ⒷⒶ, l'avertisseur du panneau avant ne fonctionne pas.

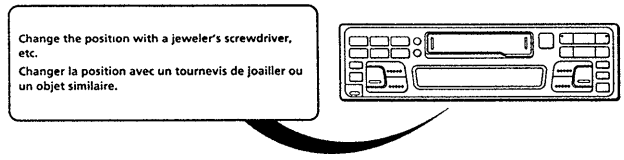
Change the position with a jeweler's screwdriver, etc.
Changer la position avec un tournevis de joaillier ou un objet similaire.

Connection Diagram — Schémas de connexion

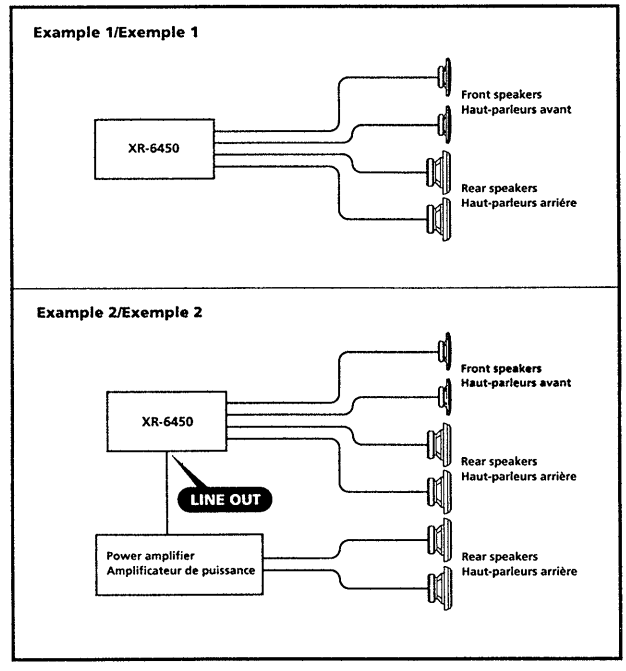

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. INSTALLING THE LOADING GEARS

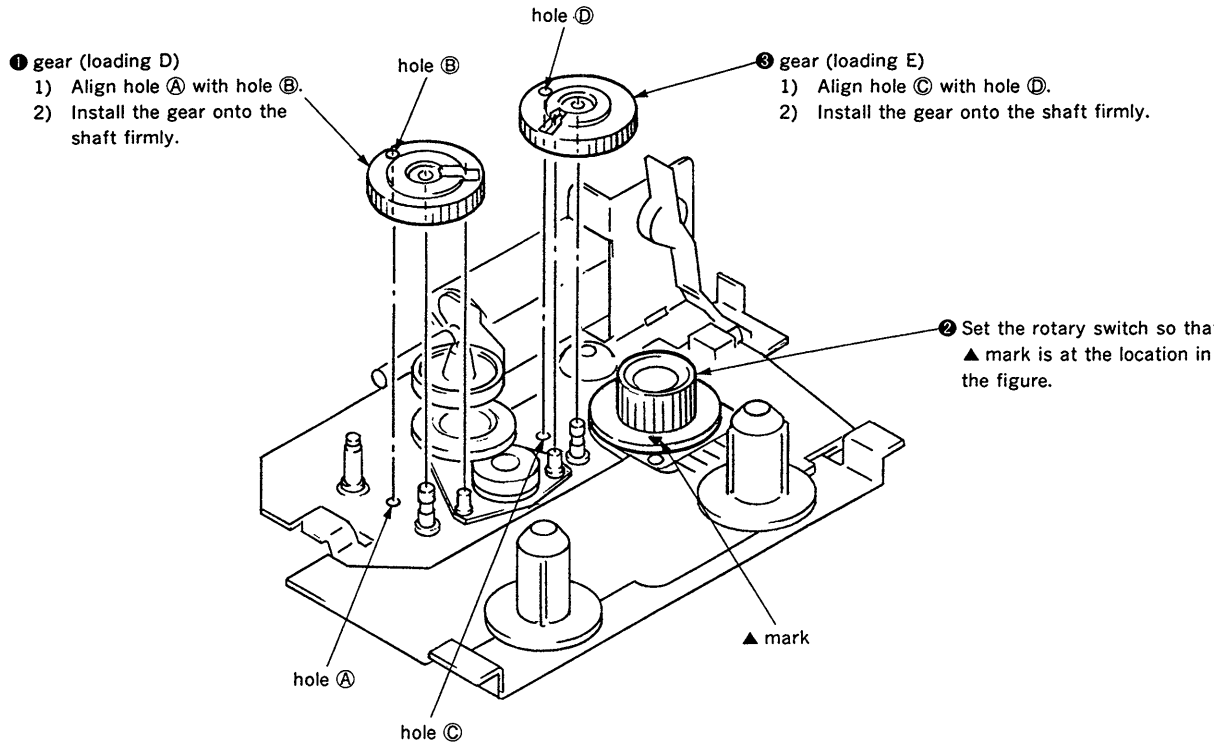
❶ gear (loading D)
1) Align hole Ⓐ with hole Ⓑ.
2) Install the gear onto the shaft firmly.
hole Ⓑ
hole Ⓓ
❸ gear (loading E)
1) Align hole Ⓒ with hole Ⓓ.
2) Install the gear onto the shaft firmly.
❷ Set the rotary switch so that ▲ mark is at the location in the figure.
▲ mark
hole Ⓐ
hole Ⓒ

2-2. INSTALLING THE REEL BRACKET

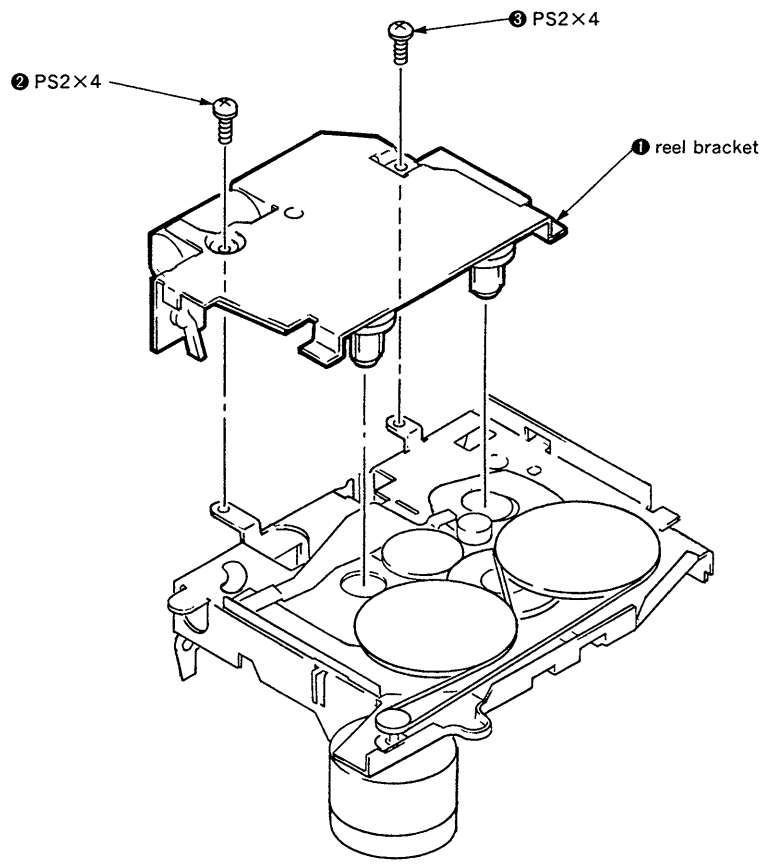

2-3. INSTALLING THE MODE LEVER AND PINCH LEVERS

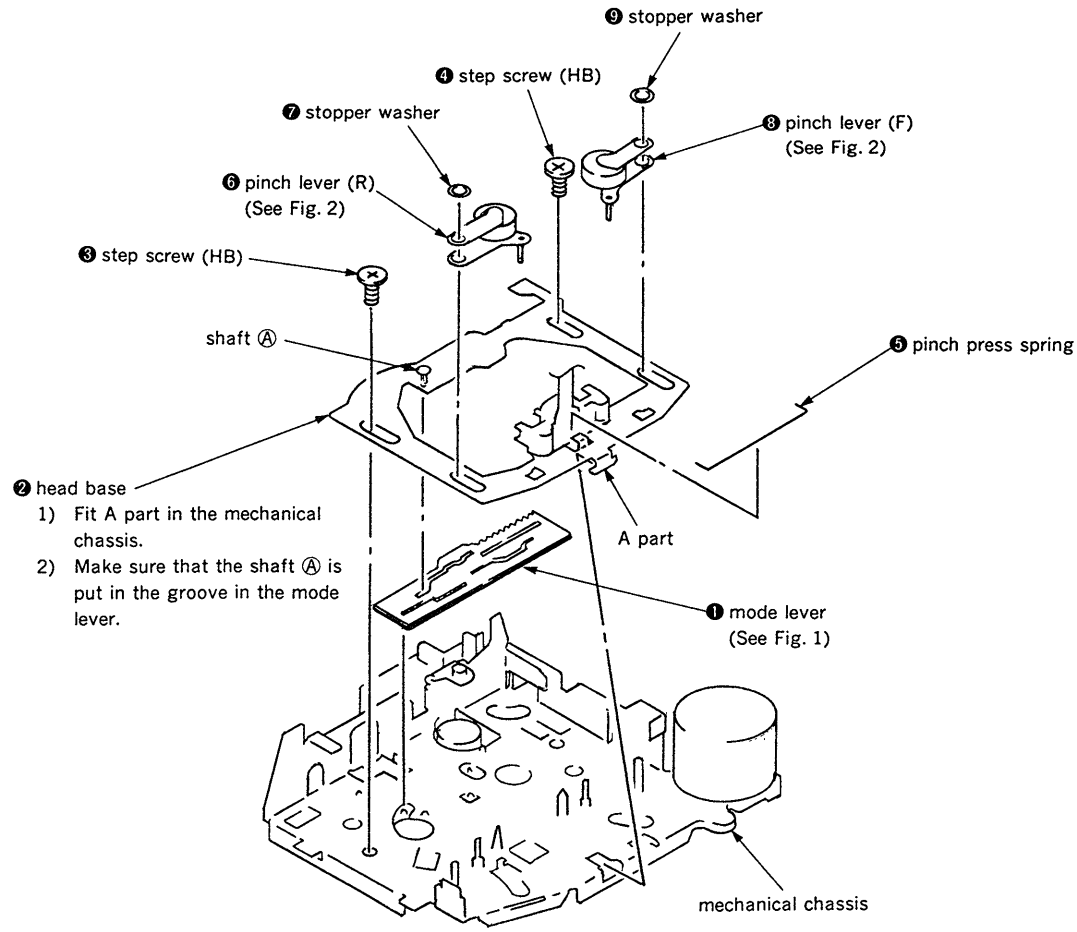
❾ stopper washer
❹ step screw (HB)
❼ stopper washer
❽ pinch lever (F)
(See Fig. 2)
❻ pinch lever (R)
(See Fig. 2)
❸ step screw (HB)
shaft Ⓐ
❺ pinch press spring
❷ head base
1) Fit A part in the mechanical chassis.
2) Make sure that the shaft Ⓐ is put in the groove in the mode lever.
A part
❶ mode lever
(See Fig. 1)
mechanical chassis

1) Align • mark on the rotary switch with hole on the mode lever.
2) Make sure that the two shafts and three projections are located as shown below.

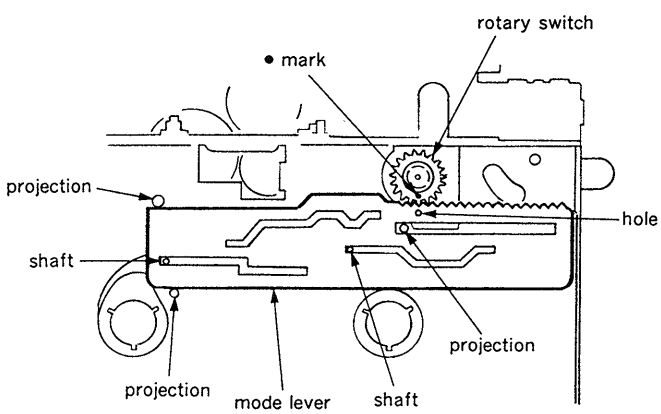

Fig. 1

1) Put the shafts of the pinch levers in the pinch press spring on its head side.

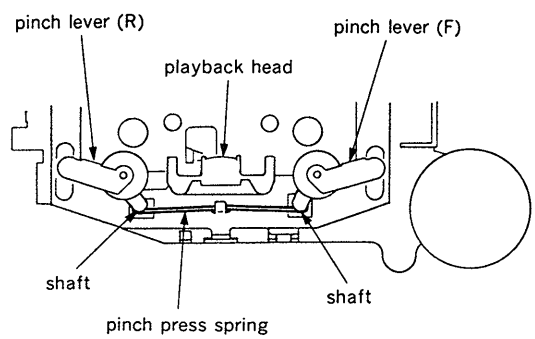

Fig. 2

2-4. INSTALLING THE CASSETTE HOUSING

❸ housing hanger
1) Fit three projections in holes on the mechanical chassis.
2) Bend C part in the direction of the arrow and fasten to prevent dislocation from the chassis.

❷ claws

❶ cassette housing
1) put the cassette housing under A part.
2) Fit B part in groove Ⓐ.

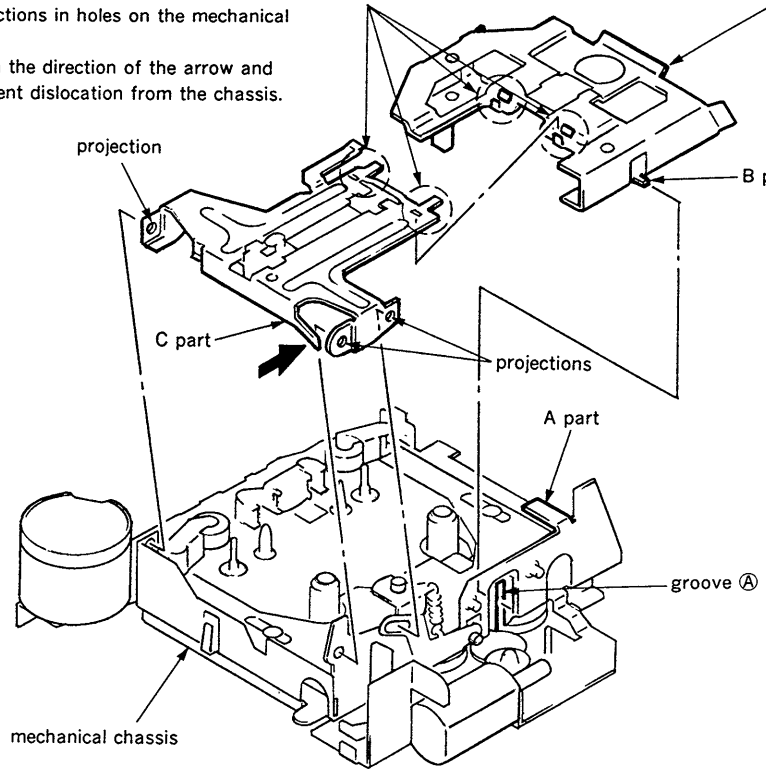

2-5. INSTALLING THE LOADING LEVER

❶ suction arm
1) Align with axis Ⓐ and install the arm onto the claw.
2) With the claw in the center, rotate the arm so as to be directed along axis Ⓑ, then fit the arm on the projection.

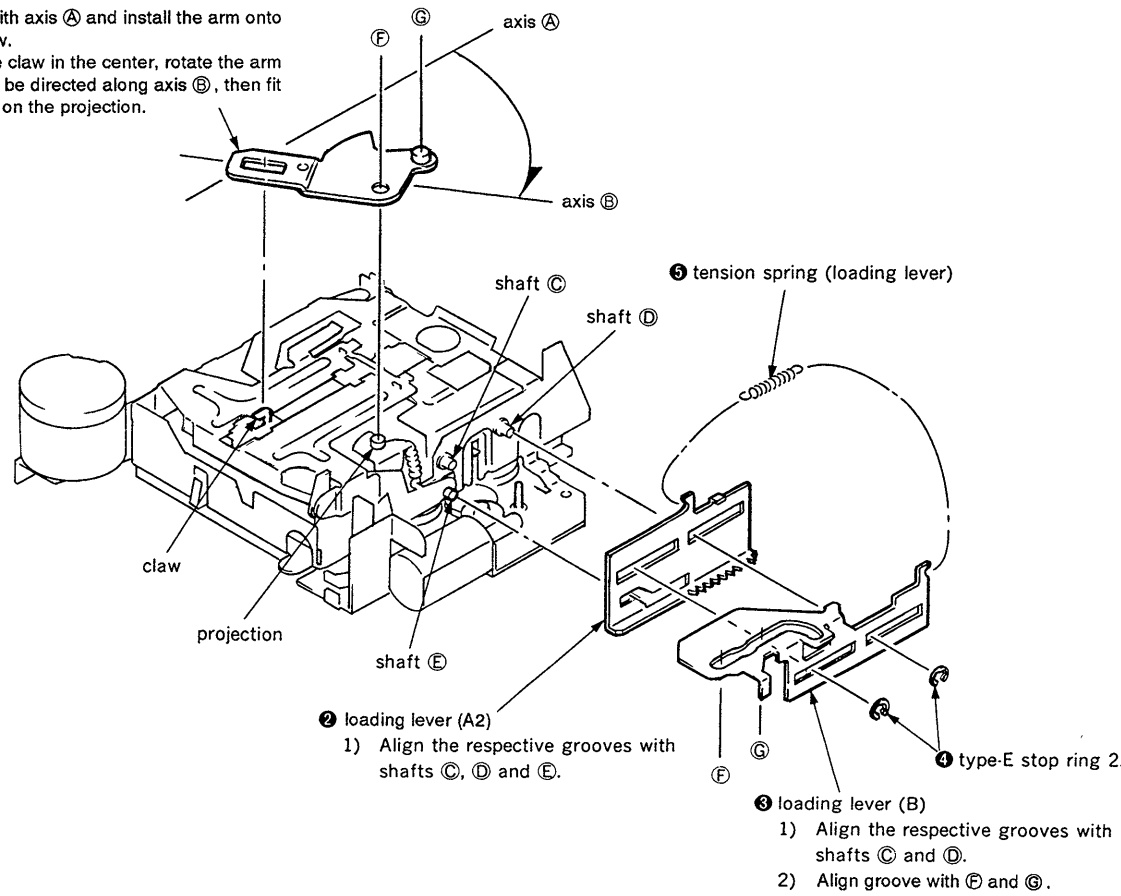

2-6. POSITIONING THE LOADING LEVERS

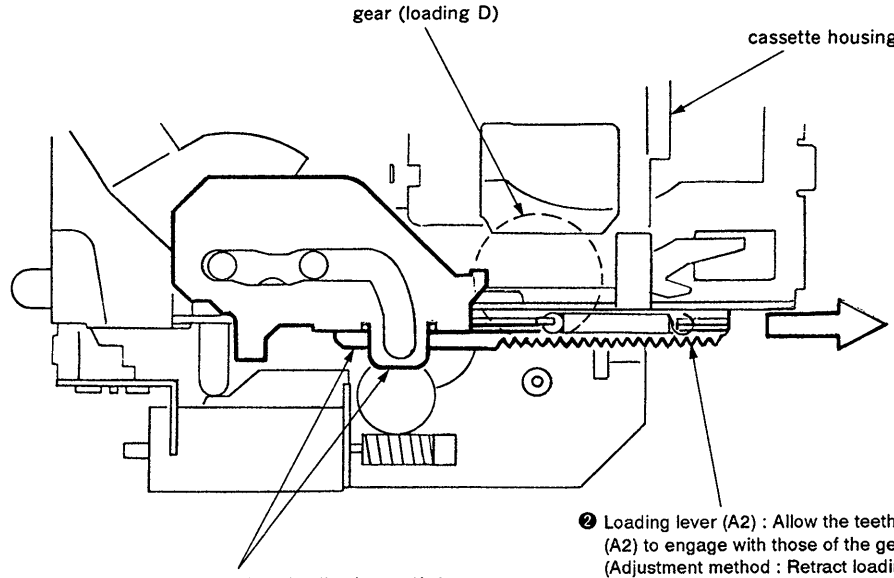

❷ Loading lever (A2) : Allow the teeth of loading lever (A2) to engage with those of the gear (loading D). (Adjustment method : Retract loading lever (A2) by 0.2 to 0.5mm in the opposite direction of the arrow.)

❶ Loading levers (A2) and (B) : Move loading levers (A2) and (B) in the direction of the arrow. (The cassette housing is put down fully at this time.)

2-7. INSTALLING THE GEAR (LOADING F)

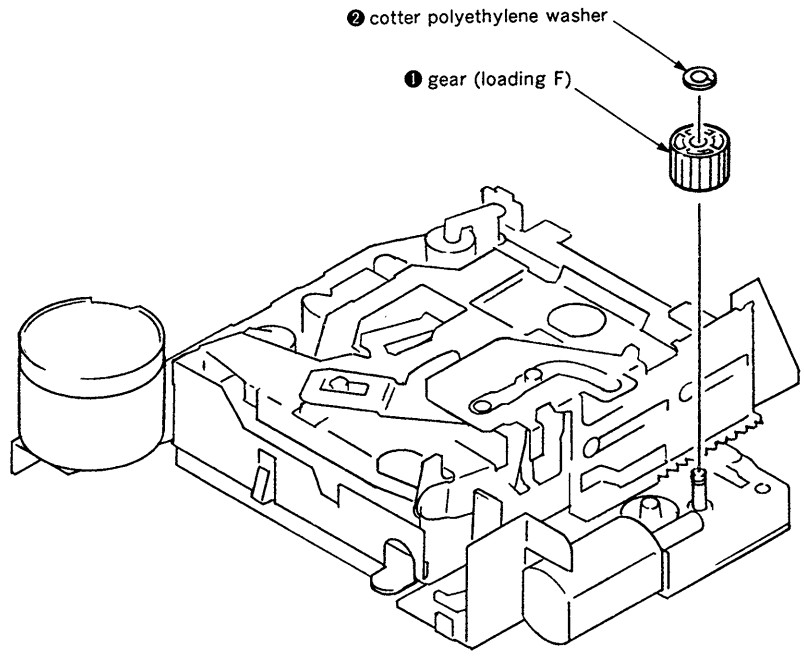

SECTION 3
ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment :
   PB head　　Pinch roller
   Idlers　　Rubber belts
   Capstan
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver
4. After the adjustments is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4V)

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	30 – 65g•cm (0.42 – 0.90 oz•inch)
FWD Back Tension		0.5 – 4.5g•cm (0.007 – 0.06 oz•inch)
REV	CQ-102RC	30 – 65g•cm (0.42 – 0.90 oz•inch)
REV Back Tension		0.5 – 4.5g•cm (0.007 – 0.06 oz•inch)
FF, REW	CQ-201B	60 – 200g•cm (0.84 – 2.78 oz•inch)

Tape Tension Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-403A	more than 90g (more than 3.18 oz)
REV	CQ-403R	

Test Tape

Type	Signal	Used for
PA-D400	400Hz, 0dB	DOLBY Level
WS-48A	3kHz, 0dB	Tape Speed Adjustment

SECTION 4
ELECTRICAL ADJUSTMENTS

TEST MODE

This set have the test mode function, in the test mode. FM Auto Scan/Stop Level and AM Auto Scan/Stop Level adjustments can be performed easier than it in ordinaly procedure.

<Set the Test Mode>

1. Set the "OFF" mode.
2. Push the preset [4] button.
3. Push the preset [5] button.
4. Press the preset [1] button for two seconds.
5. Then the display indicates five patterns and stops, the test mode is set.

<Rerease the Test mode>

1. Push the "OFF" button.

See the adjustment location from on page 19 for the adjustment.

DECK SECTION | 0 dB=0.775V

Capstan Motor Tape Speed Adjustment

Procedure :

1. Put the set into the FWD PB mode.

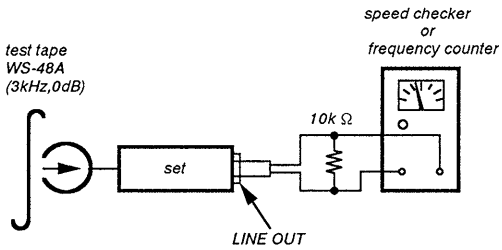

Specification : Constant speed

Speed checker	frequency counter
− 1.5 to +2.5%	2,955 to 3,075 Hz

Adjustment Location : Capstan motor volume

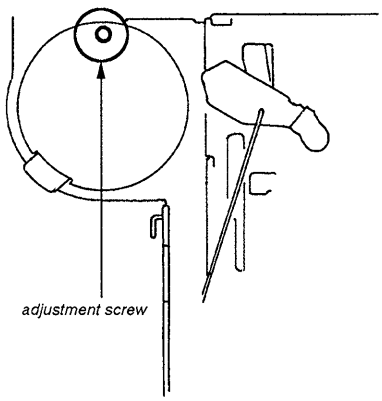

DOLBY Level Adjustment : XR-6450
Tape Output Level Adjustment : EXR-21

Setting :

(Dolby NR) button : OFF
SEL (volume) button : Maximum
SEL (balance) button : Center
SEL (bass) button : Center
SEL (treble) button : Center

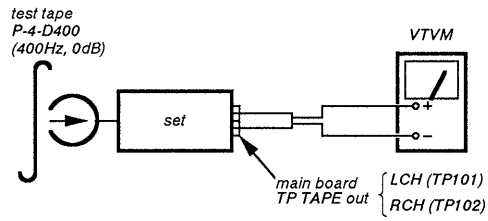

Procedure :

1. Put the set into the FWD PB mode.
2. Adjust RV101 (L-CH) and RV201 (R-CH) so that VTVM reading on [− 4.7dB ± 0.5dB (0.43 − 0.47V)] : XR-6450
   [− 4.7dB ± 3dB (0.44 − 0.46V)] : EXR-21

Adjustment Location : MAIN board (See page 19)

TUNER SECTION 0 dB=1 μV

Cautions during repair
When the front end is defective, replace it by a new one because its internal block is difficult to repair.

- Carrier Frequency
  no mark : US, Canadian model
  ( ) : E model

FM Auto Scan Stop Level Adjustment

Setting :
TUNER button : FM

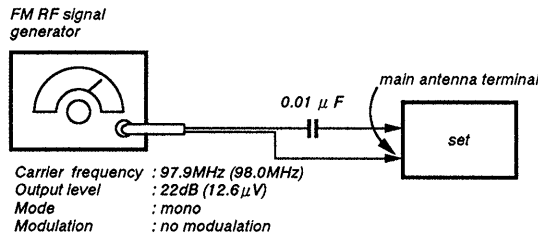

Procedure :

1. Set to the test mode. (see page 15)
2. Push the FM button.

Main Display



3. Push the preset SEEK/AMS + ⏭ button.
4. Adjust with the volume RV3 on TU1 so that the "FM" indication turns to "FMIII" indication on the main display window.
   But in case of already indicated "FMIII", turn the RV3 so that put out light " III " indication and adjustment.

Main Display



Specification : Stop sensitivity : 22dB ± 3dB

Note : " III " indication of main display was align voltage of TP (SD).
TP (SD) voltage 0V → " III " light off
TP (SD) voltage 5V → " III " light on

Adjustment Location : Main board (TU1) (See page 19)

AM Auto Scan Stop Level Adjustment

Setting :
TUNER button : AM

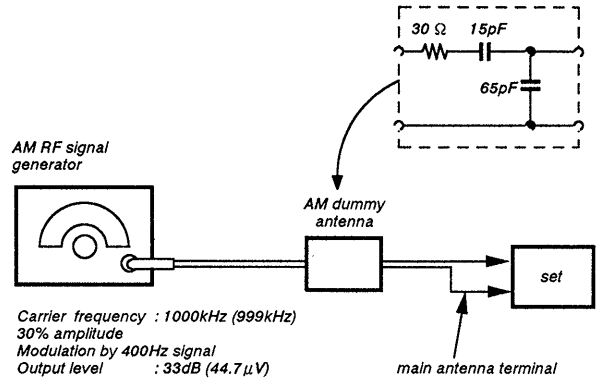

Procedure :

1. Set to the test mode. (see page 15)
2. Push the AM button.

Main Display



3. Adjust with the volume RV1 on TU1 so that the "AM" indication turns to "AMIII" indication on the main display window.
   But in case of already indicated "AMIII", turn the RV1 so that put out light " III " indication and adjustment.

Main Display

Specification : Stop sensitivity : 33dB ± 3dB

Note : " III " indication of main display was align voltage of TP (SD).
TP (SD) voltage 0V → " III " light off
TP (SD) voltage 5V → " III " light on

Adjustment Location : Main board (TU1) (See page 19)

SEE ADDITIONAL INFORMATION

High Cut Control Effect Adjustment

Setting :
TUNER button : FM

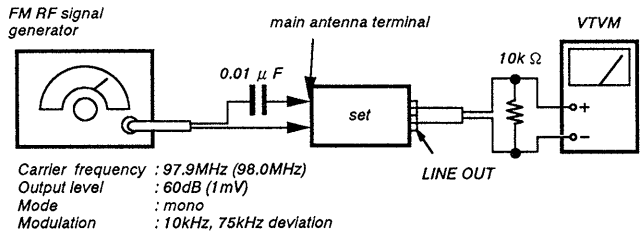

Procedure :

1. Tune the 97.9MHz (98.0MHz).
2. The then output level is supposing that (A) dB.
3. Adjust with the volume RV2 on TU1 so that the output Level is (A) − 5 ± 2dB then signal generator input set to 20dB.

Adjustment Location : Main board (TU1)

FM Noise Focus Adjustment

Setting :
TUNER button : FM

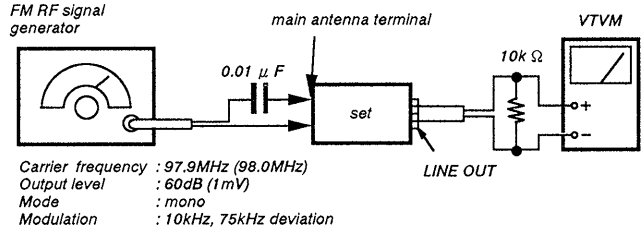

Procedure :

1. Tune the 97.9MHz (98.0MHz).
2. The then output level is supposing that (B) dB.
3. Adjust with the volume RV5 on TU1 so that the output Level is (B) − 30 ± 3dB then signal generator input set to − 20dB.

Adjustment Location : Main board (TU1) (See page 19)

FM Stereo Separation (30dB) Adjustment

Setting :
TUNER button : FM

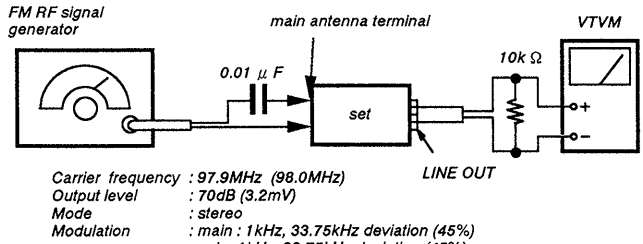

Procedure :

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV4 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV4 for minimum reading.

L-CH Stereo separation : Ⓐ − Ⓑ
R-CH Stereo separation : Ⓒ − Ⓓ
The separations of both channels should be equal.

Specification : Separation more than 30dB.

Adjustment Location : Main board (TU1) (See page 19)

【MAIM BOARD】 (Component side)

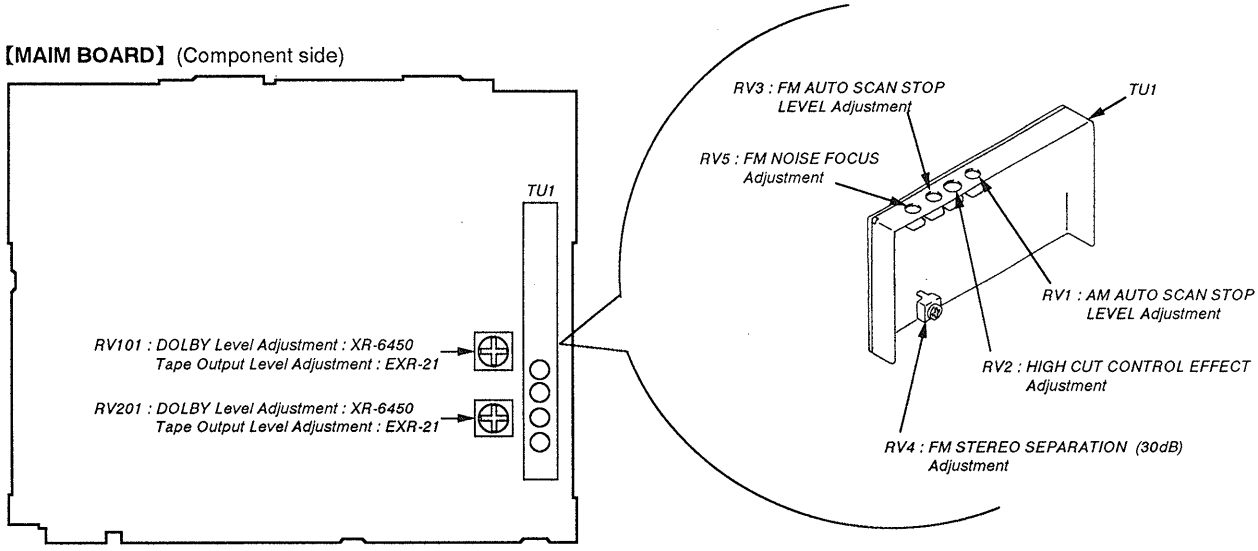
TU1
RV101 : DOLBY Level Adjustment : XR-6450
Tape Output Level Adjustment : EXR-21
RV201 : DOLBY Level Adjustment : XR-6450
Tape Output Level Adjustment : EXR-21
RV3 : FM AUTO SCAN STOP
LEVEL Adjustment
TU1
RV5 : FM NOISE FOCUS
Adjustment
RV1 : AM AUTO SCAN STOP
LEVEL Adjustment
RV2 : HIGH CUT CONTROL EFFECT
Adjustment
RV4 : FM STEREO SEPARATION (30dB)
Adjustment

【MAIN BOARD】 (Conductor side)

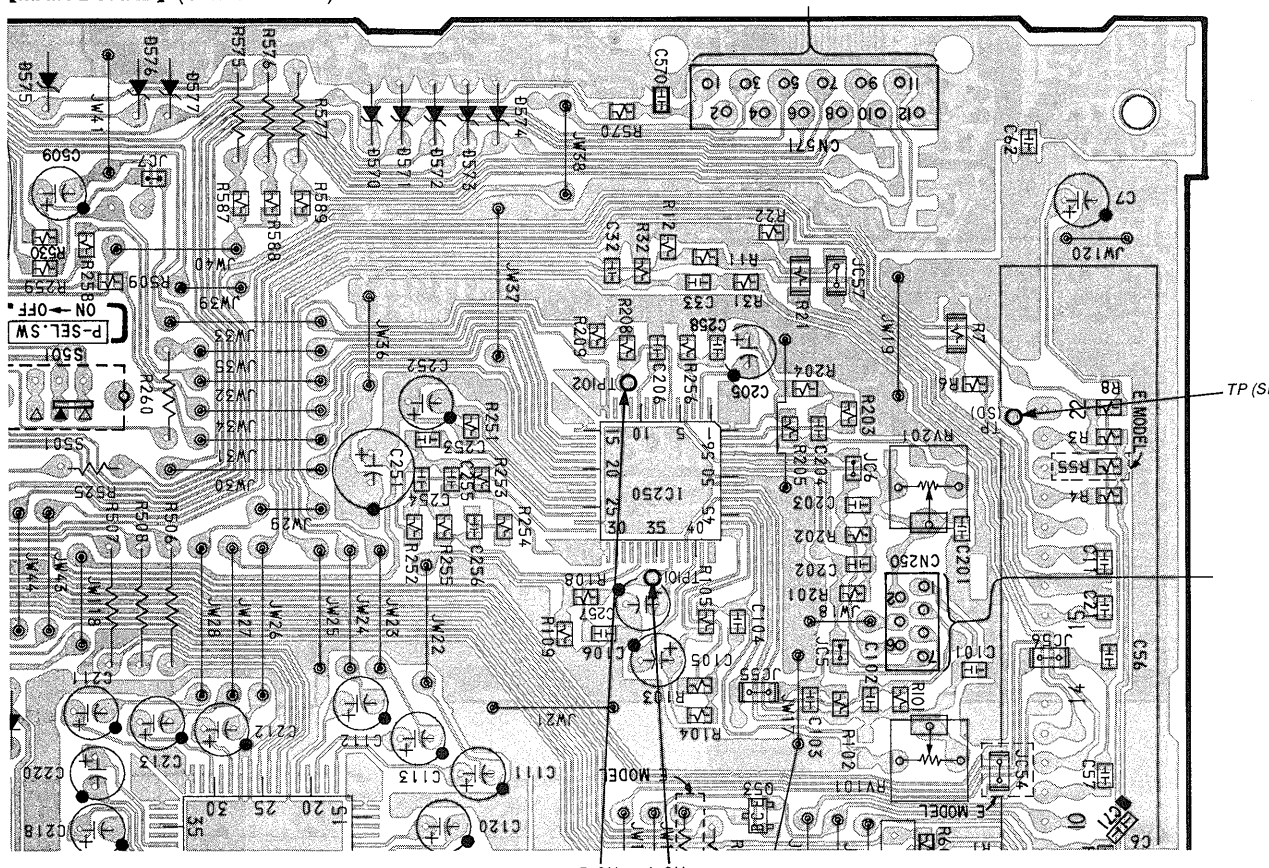

SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

• Signal path.
⇨ : FM
➡ : AM
⇨ : PB

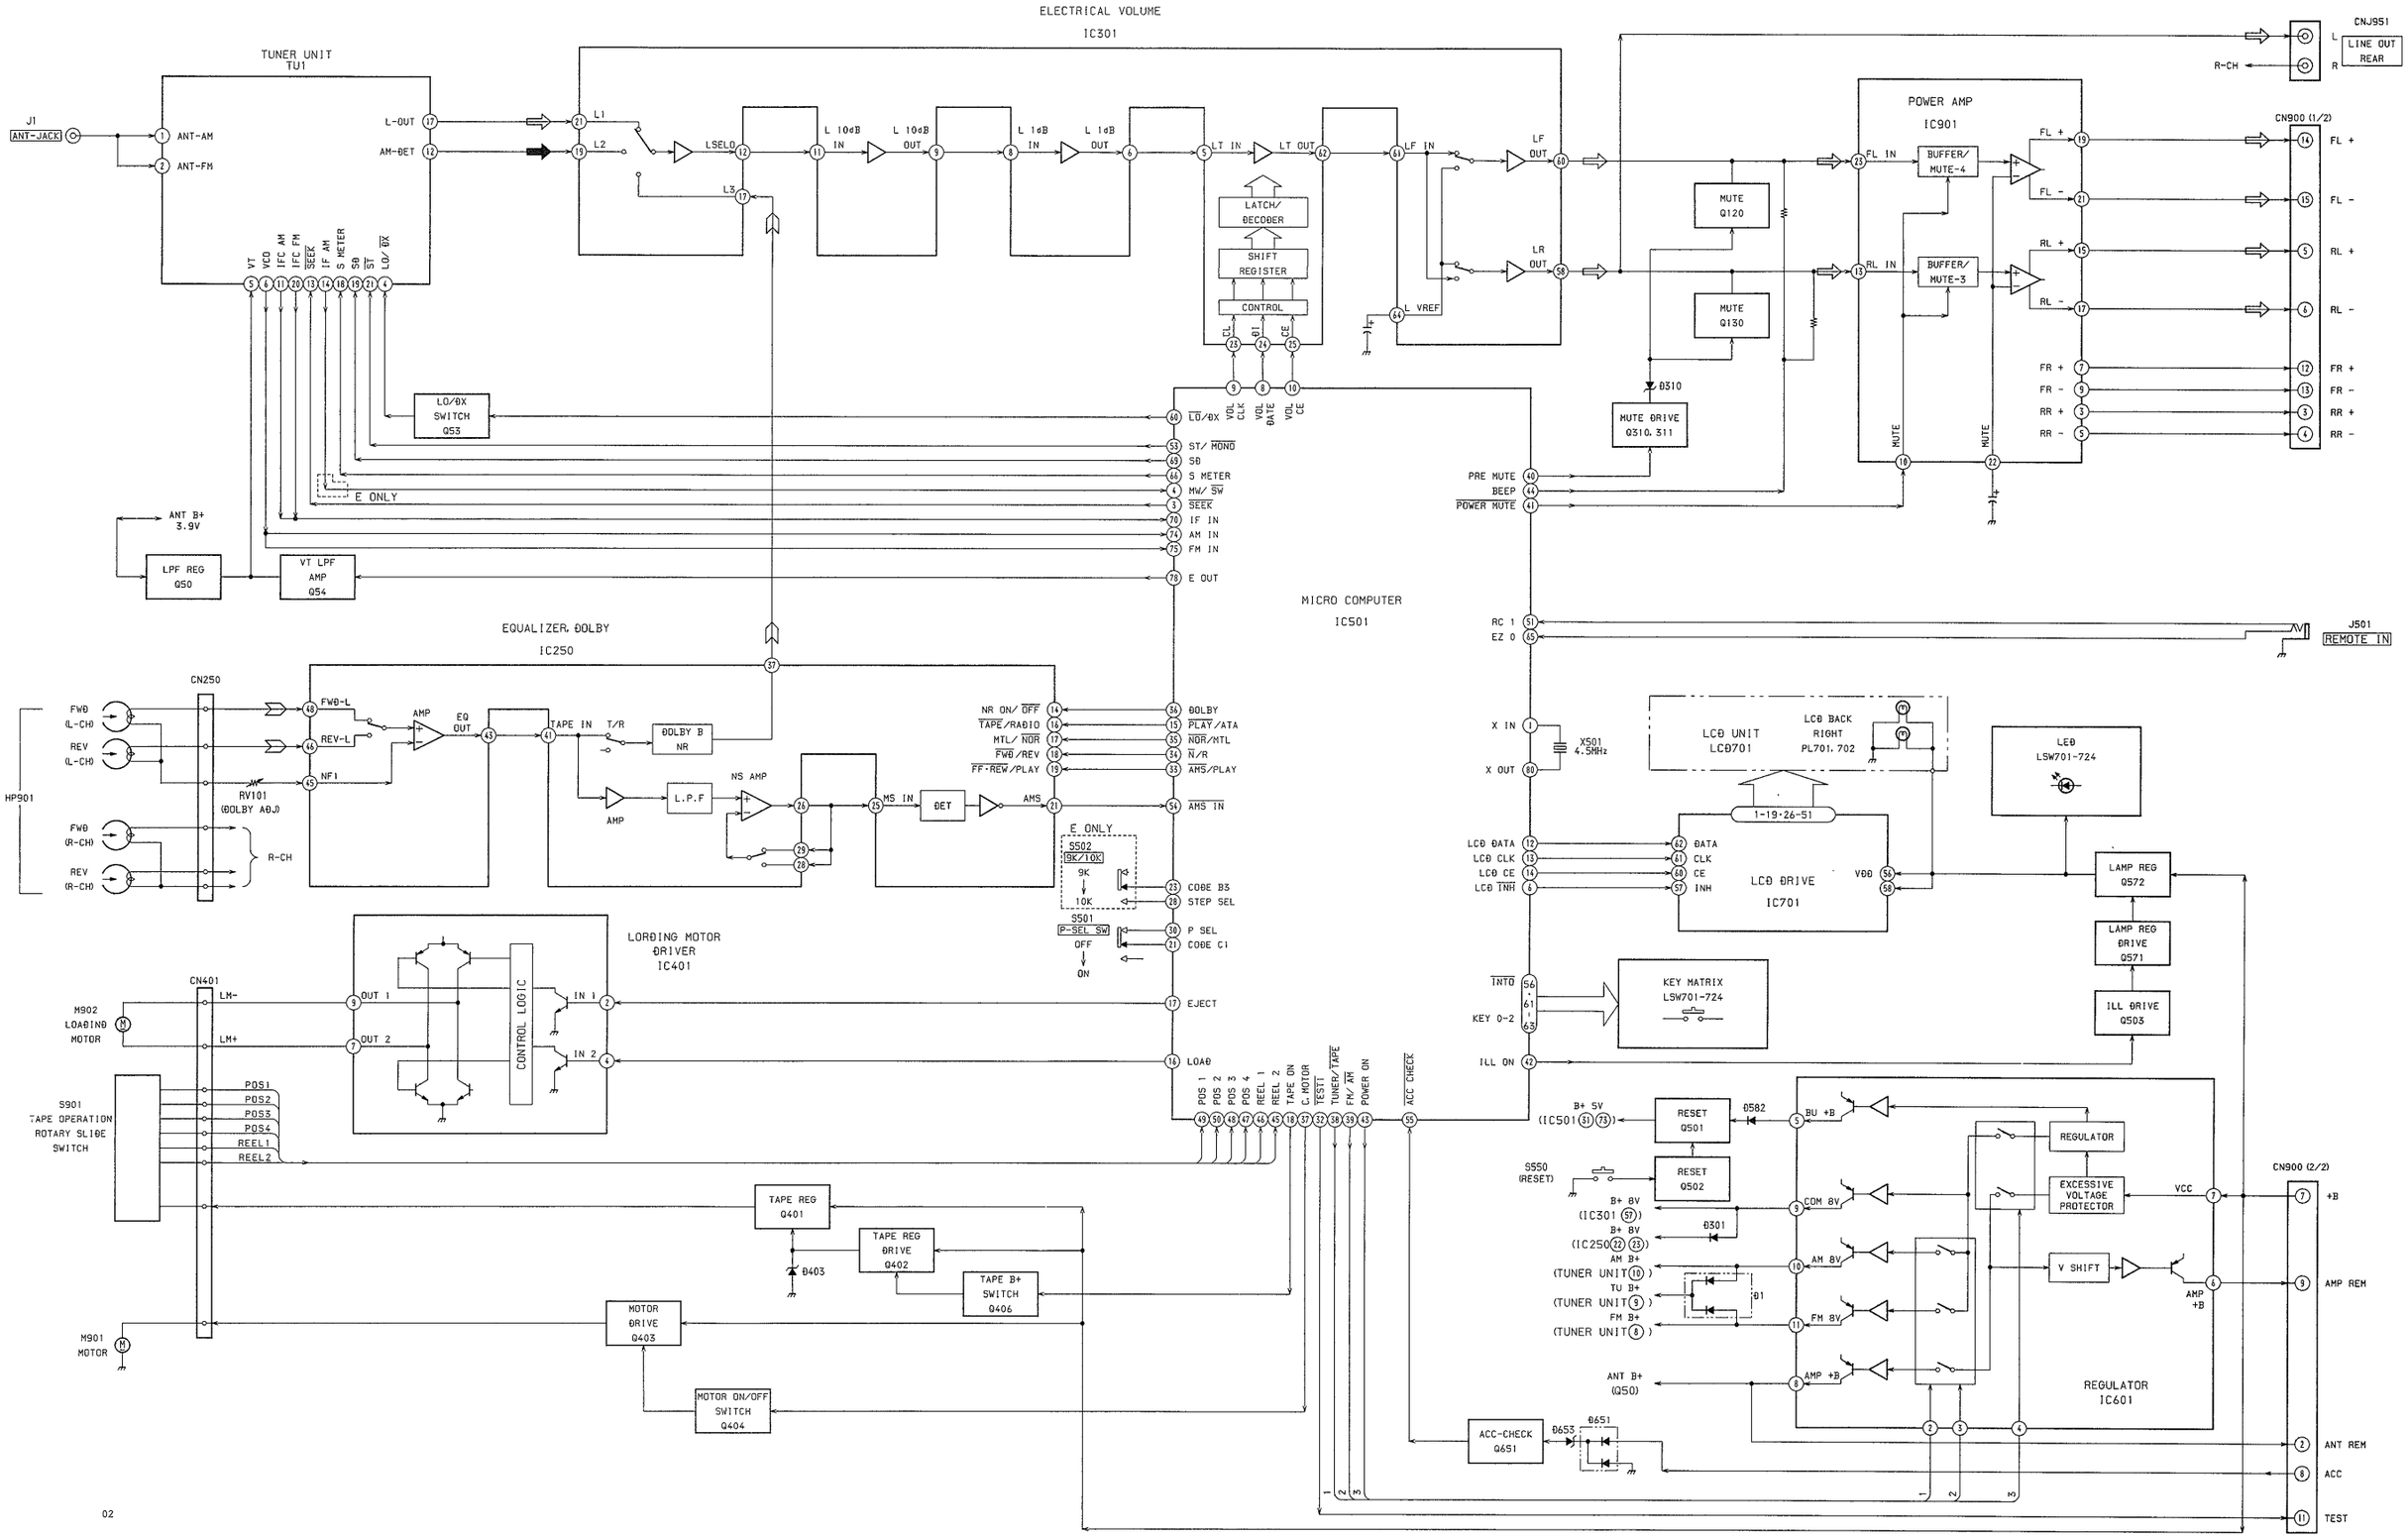

02

SEE ADDITIONAL INFORMATION

• SEMICONDUCTOR LEAD LAYOUTS

DTC314TKH04
UN2111
UN2211
2SA1037AK-T146-QR
2SC1623-L5L6

DAN202K

MA4047-M (QZ)
1N5404TU



2SB1115A-YQ

MA721WK (TX)

MA723
1SS133

2SD1802-S



MA4039-M (QZ)
MA4062-M (QZ)
MA4091-H (QZ)
MA4110-L (QZ)



MA8051-H
MA8075-M
MA8240-TX

2SD2525

2SK1657-T1B

Note:

- ○— : parts extracted from the component side.
- ■ : parts mounted on the conductor side.
- ● : Through hole.
- ▒ : Pattern from the side which enables seeing. (The other layers' patterns are not indicated)

Caution :

Pattern face side : (Conductor Side) Parts on the pattern face side seen from the pattern face are indicated.
Parts face side : (Component side) Parts on the parts face side seen from the parts face are indicated.

• SEMICONDUCTOR LOCATION

Ref. No.	Location
D1	D-10
D2	D-9
D50	C-10
D301	E-12
D310	C-12
D311	C-13
D403	D-14
D405	D-15
D501	D-14
D550	G-15
D570	G-11
D571	G-11
D572	G-11
D573	G-11
D574	G-11
D575	G-12
D576	G-12
D577	G-12
D581	D-13
D582	C-15
D651	B-14
D653	B-15
D660	D-13
D701	H-2
D702	H-4
D703	H-2
D704	H-2
D705	H-2
D901	B-14
D902	C-13
IC250	E-10
IC301	D-12
IC401	D-15
IC501	E-13
IC601	C-15
IC701	H-4
IC901	B-12
Q50	D-10
Q53	D-10
Q54	D-10
Q120	D-10
Q130	D-10
Q220	C-10
Q230	C-11
Q310	C-12
Q311	C-12
Q401	D-14
Q402	D-14
Q403	D-14
Q404	D-14
Q406	D-14
Q501	D-13
Q502	D-14
Q503	D-13
Q571	D-13
Q572	D-13
Q651	B-15

5-2. PRINTED WIRING BOARDS

SEE ADDITIONAL INFORMATION

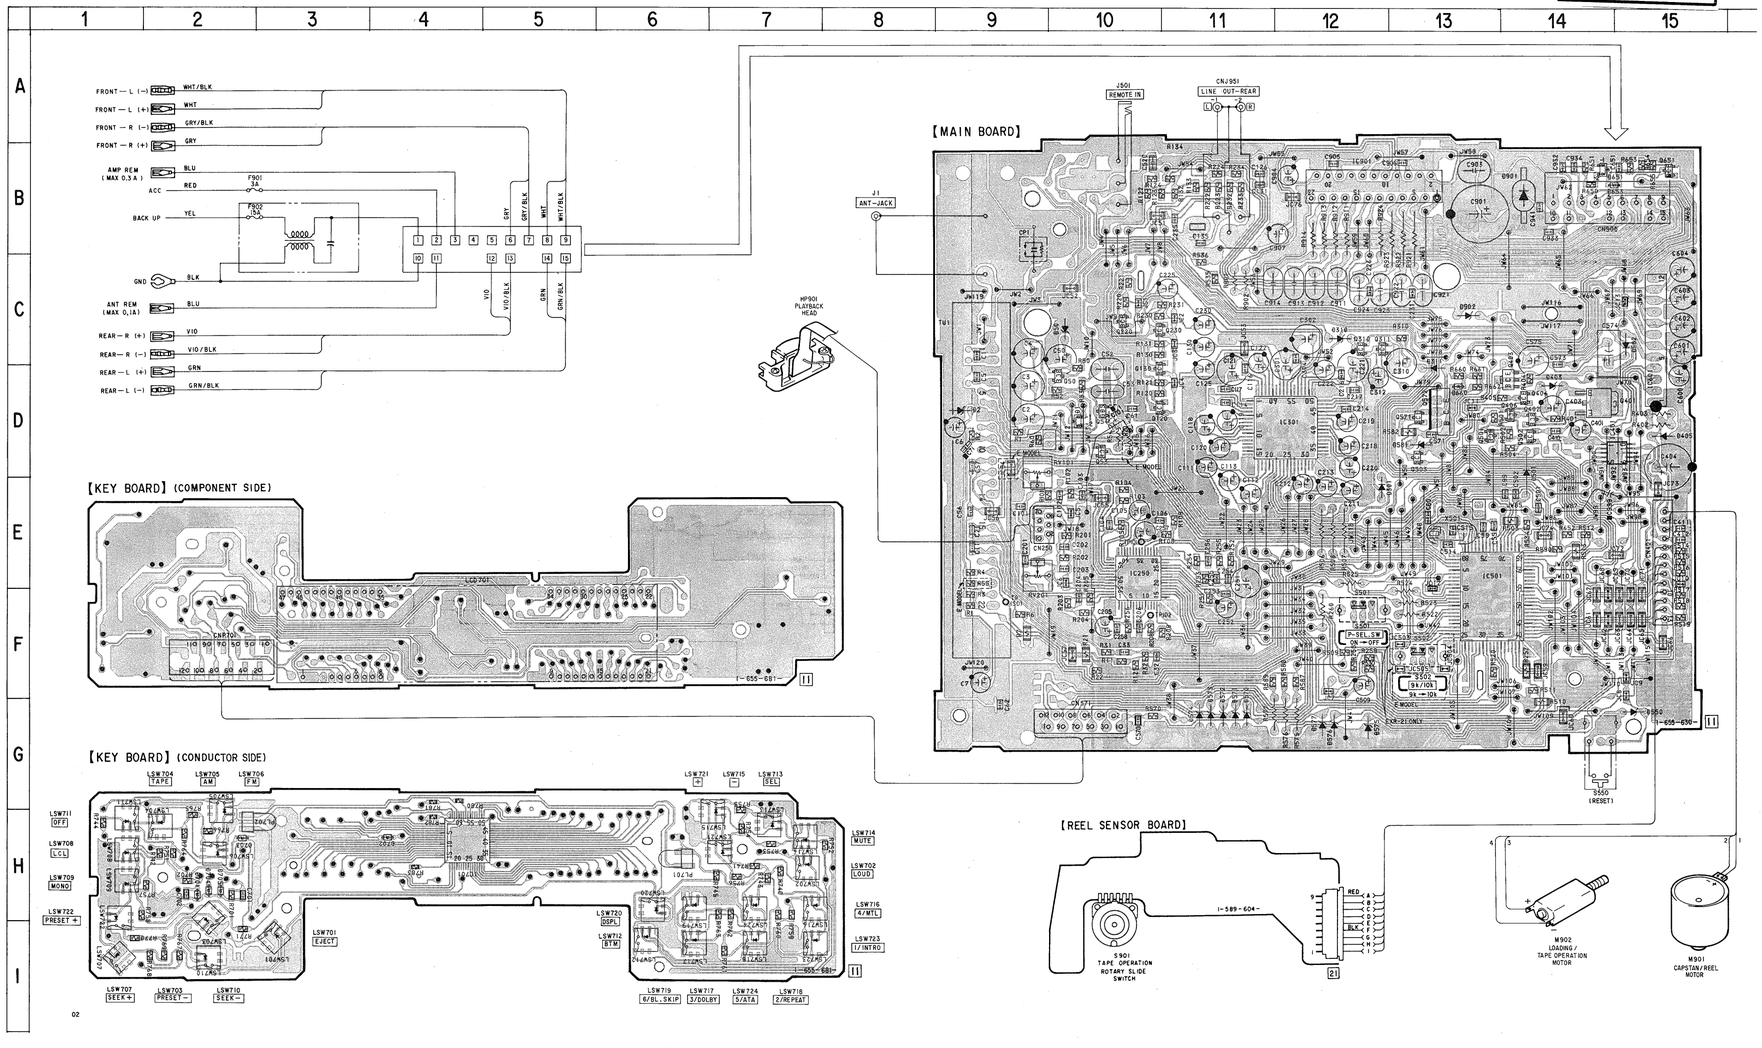

5-3. SCHEMATIC DIAGRAM

SEE ADDITIONAL INFORMATION

【MAIN BOARD】

【KEY BOARD】

【REEL SENSOR BOARD】

• WAVEFORMS

① 4.6Vp-p, 2.2mSEC — IC501 ㉘

② 2.6Vp-p, 20.2 μSEC — IC701 ㉟

③ 5.6Vp-p, 9.6mSEC — IC701 ㉝ ㉞

④ 5.6Vp-p, 9.6mSEC — IC701 ① – ⑬ ㉜ – ㉟

Note :

- All capacitors are in μ F unless otherwise noted. pF: μ μ F
  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼W or less unless otherwise specified.
- B+ : B+ Line
- ▭ : adjustment for repair.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BACK-UP terminals.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
  ( ) : AM
  < > : TAPE
- Voltages are taken with a VOM (Input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : FM ⇨ : PB

5-4. IC BLOCK DIAGRAM

IC250 HA1264

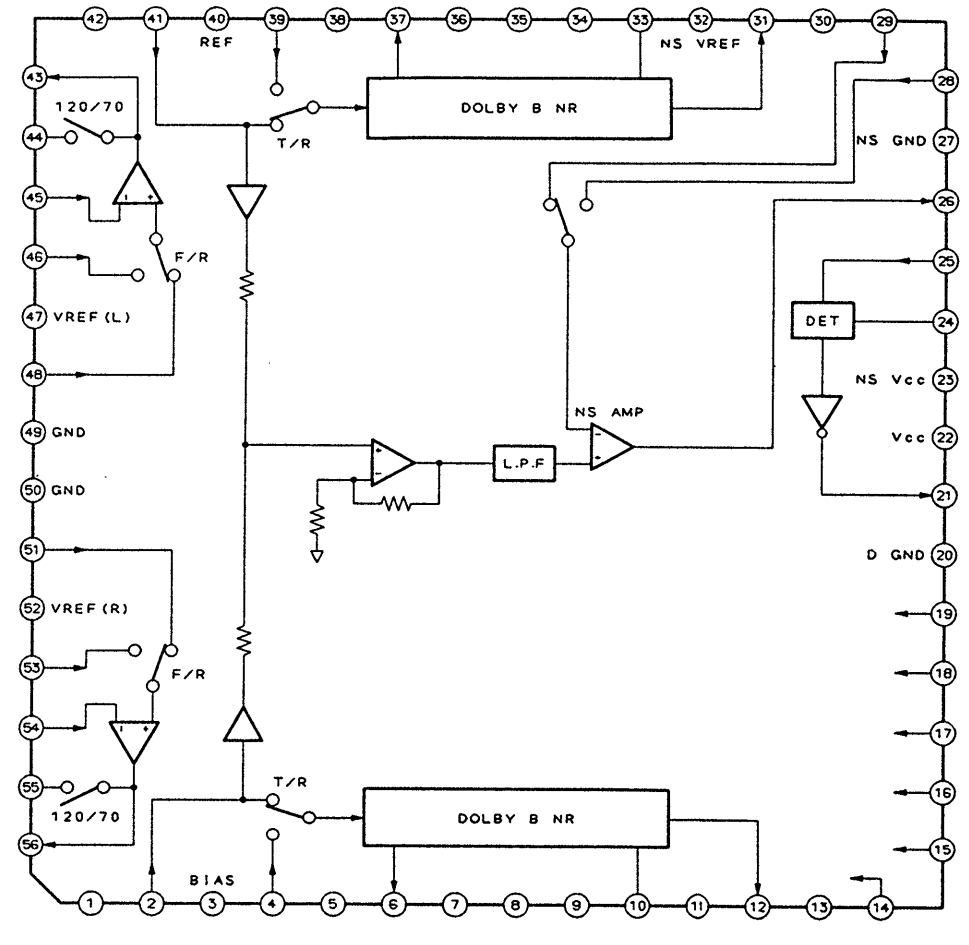

IC901 HA13151A

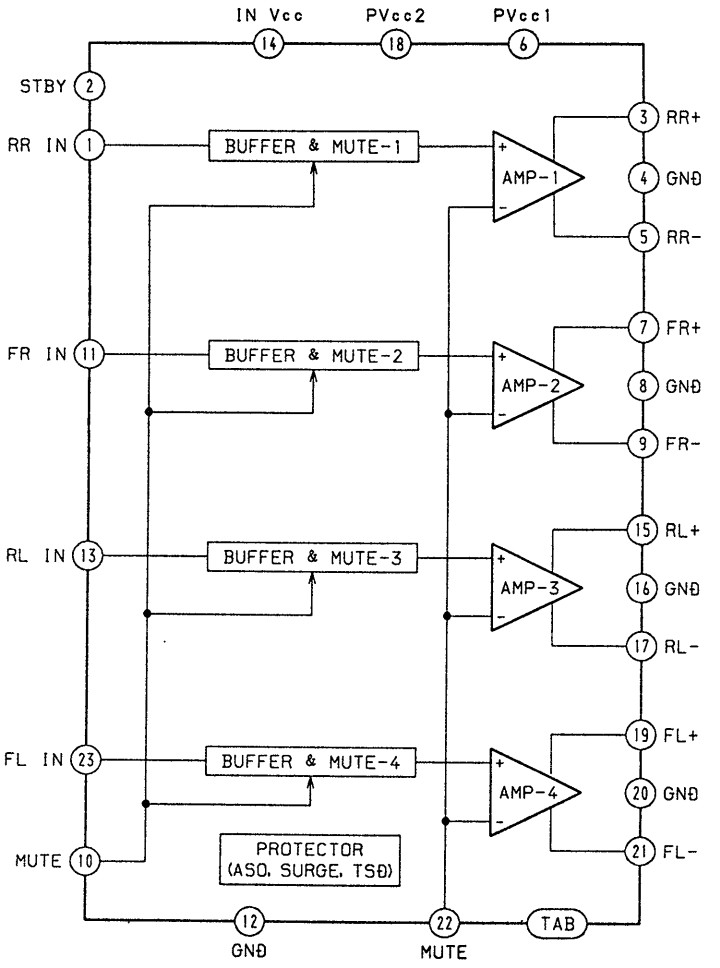

IC401 LB1638M

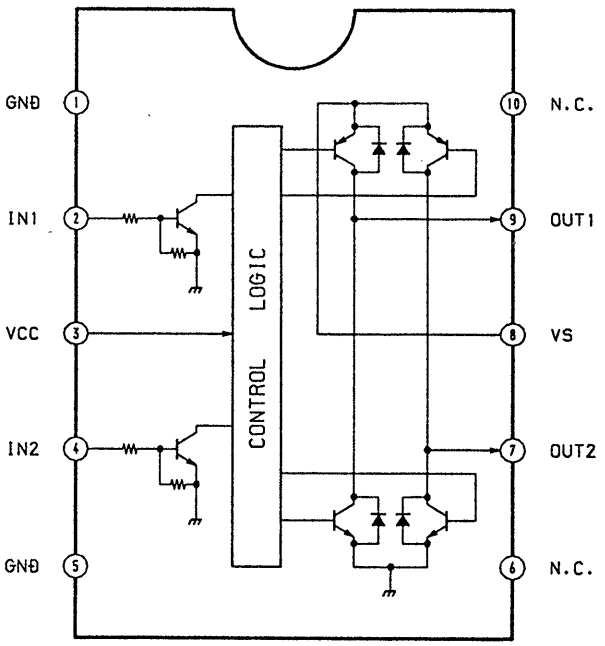

IC601 BA3910B-V3

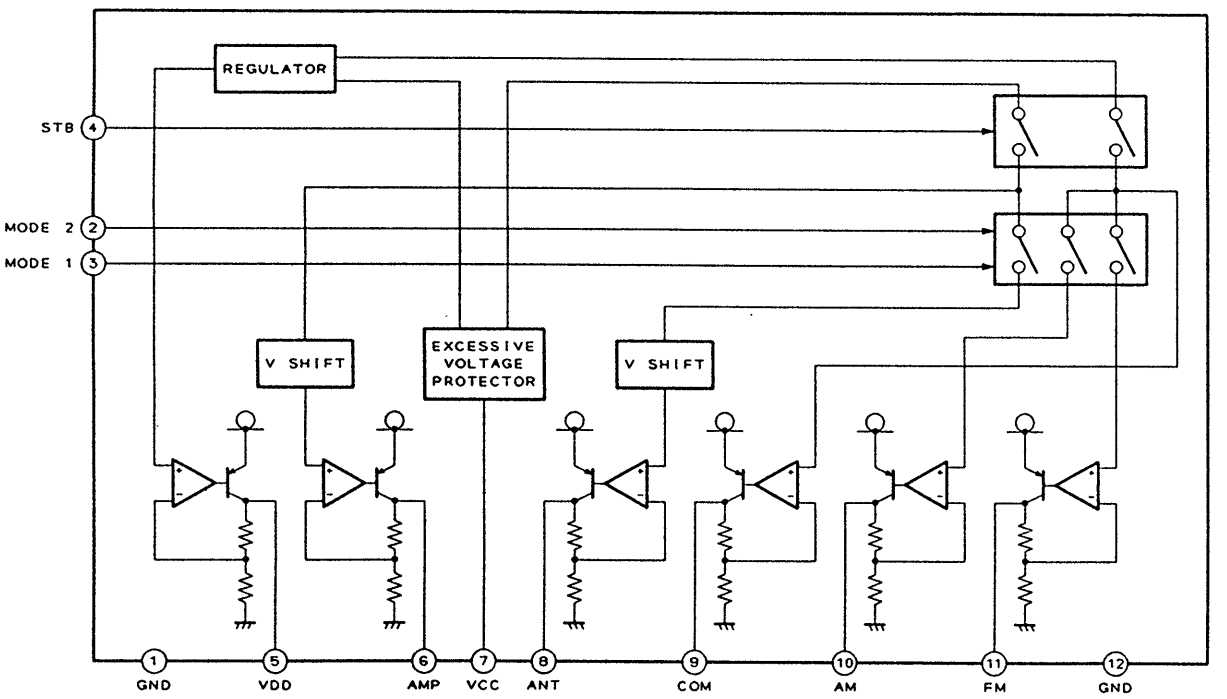

SECTION 6
EXPLODED VIEWS

NOTE :

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * "are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

6-1. CHASSIS SECTION

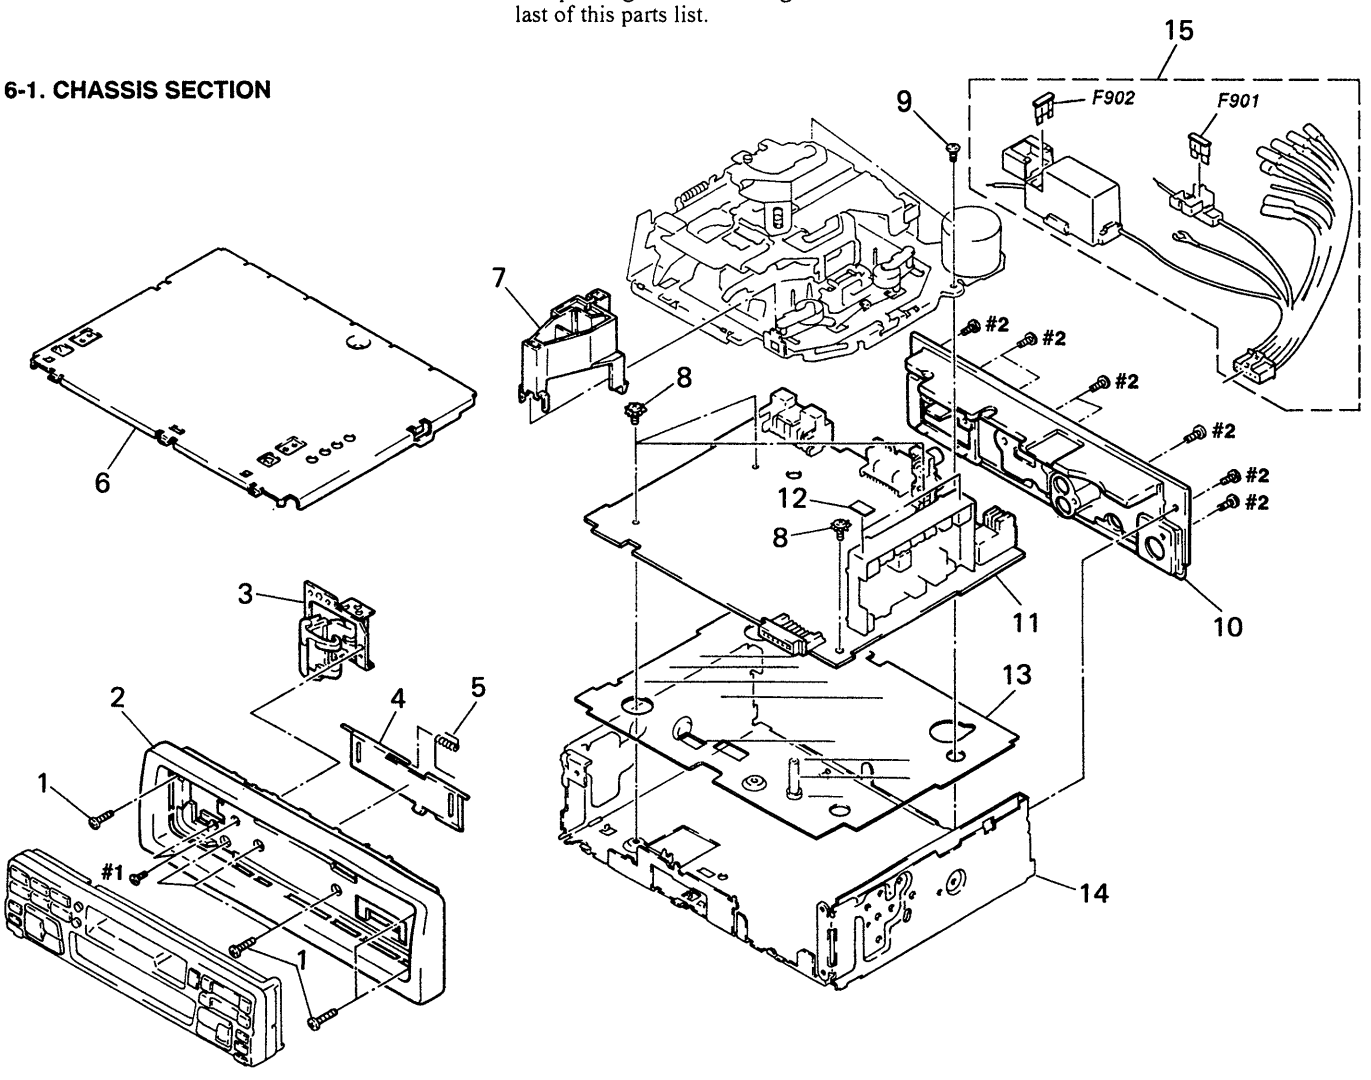

Ref. No.	Part No.	Description	Remark
1	3-907-995-01	SCREW (2.6×8) (BZN), +PTT	
2	3-921-650-01	PANEL, SUB	
3	X-3367-636-1	LOCK ASSY	
4	3-920-839-11	DOOR, CASSETTE (EXR-21)	
4	3-922-165-31	DOOR, CASSETTE (XR-6450)	
5	3-913-076-01	SPRING (C DOOR), TORSION	
* 6	X-3369-736-1	COVER ASSY	
7	3-916-872-01	GUIDE	
8	3-915-923-01	SCREW, GROUND POINT	
9	3-919-171-01	SCREW (2.6×6) (C TIGHT)	
* 10	3-921-658-01	HEAT SINK	

Ref. No.	Part No.	Description	Remark
* 11	A-3298-556-A	MAIN BOARD, COMPLETE (XR-6450:US, Canadian)	
* 11	A-3298-557-A	MAIN BOARD, COMPLETE (E)	
* 11	A-3298-563-A	MAIN BOARD, COMPLETE (EXR-21)	
12	9-911-840-XX	CUSHION (U)	
* 13	3-921-976-01	SHEET, INSULATING	
* 14	X-3369-735-1	CHASSIS ASSY	
15	1-765-082-11	CORD (WITH CONNECTOR) (POWER, SPEAKER) (including F901, 902)	
F901	1-533-326-11	FUSE (BLADE TYPE) (AUTO FUSE) (3A)	
F902	1-533-331-11	FUSE (BLADE TYPE) (AUTO FUSE) (15A)	

6-2. FRONT PANEL SECTION

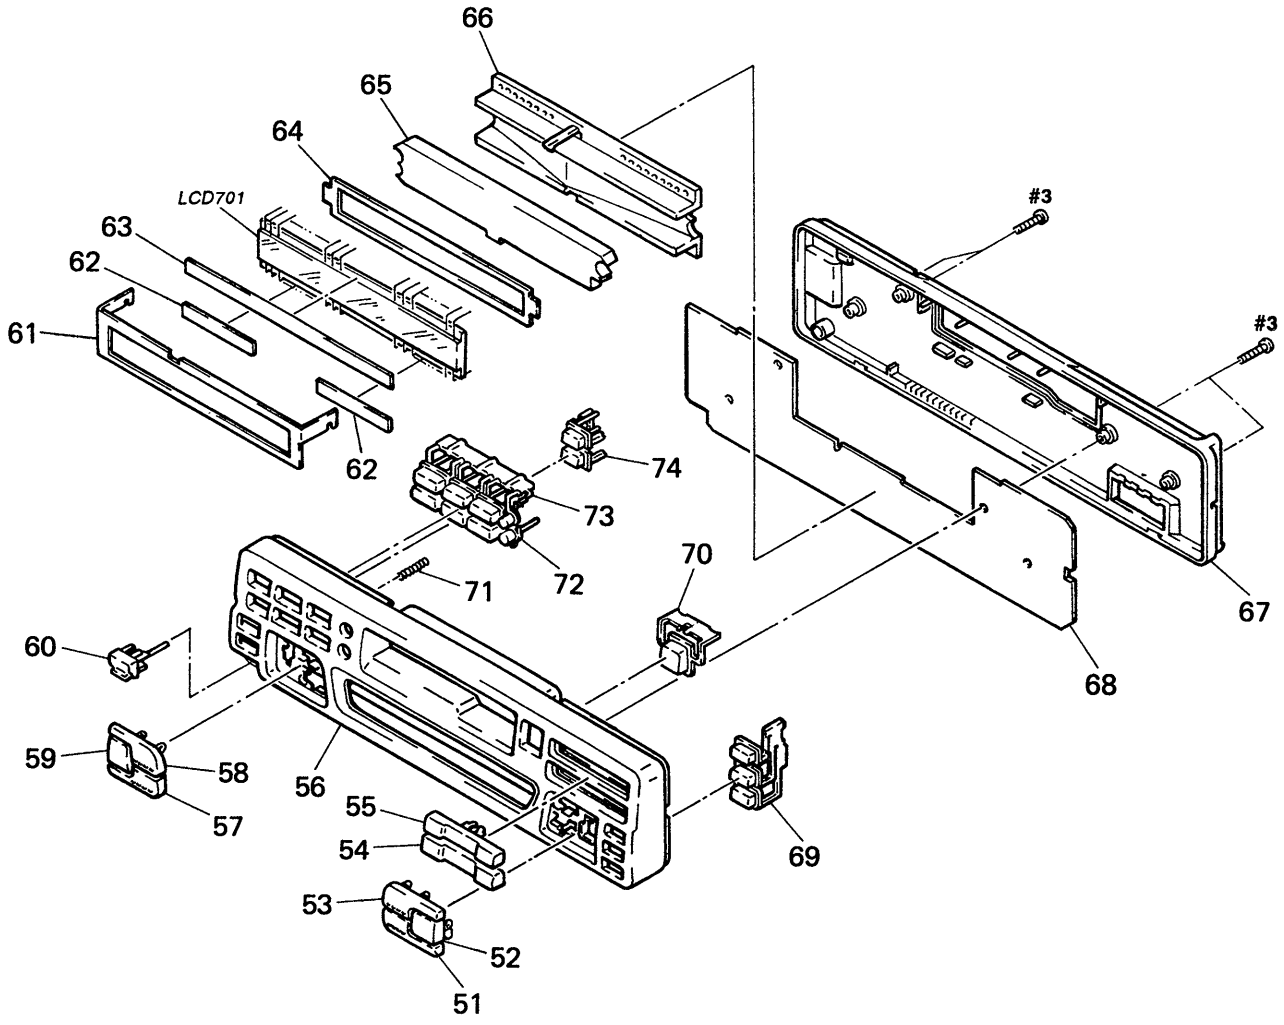

Ref. No.	Part No.	Description	Remark
51	3-921-909-01	BUTTON (AM) (EXCEPT E)	
51	3-921-909-41	BUTTON (AM) (E)	
52	3-921-916-11	BUTTON (CD. TAPE)	
53	3-921-915-01	BUTTON (FM)	
54	3-921-652-01	BUTTON (PRESET)	
55	3-921-651-01	BUTTON (SEEK)	
56	3-921-648-01	PANEL, FRONT (XR-6450)	
56	3-921-648-11	PANEL, FRONT (EXR-21)	
57	3-921-911-01	BUTTON (-)	
58	3-921-910-01	BUTTON (+)	
59	3-921-902-01	BUTTON (SEL)	
60	3-921-900-01	BUTTON (RELEASE)	
* 61	3-921-659-01	PLATE (LCD), GROUND	
* 62	3-921-727-01	SHEET (LCD) (S)	
* 63	3-921-726-01	SHEET (LCD) (L)	

Ref. No.	Part No.	Description	Remark
* 64	3-921-660-01	SHEET (REFLECTOR)	
* 65	3-921-656-01	PLATE, LIGHT GUIDE	
* 66	3-921-657-01	HOLDER (LCD)	
67	3-921-649-01	PANEL, FRONT BACK	
* 68	A-3298-559-A	KEY BOARD, COMPLETE (EXCEPT E)	
* 68	A-3298-560-A	KEY BOARD, COMPLETE (E)	
69	3-921-898-11	BUTTON (3 GANG)	
70	3-921-653-01	BUTTON (EJECT)	
71	3-914-590-01	SPRING (R2)	
72	3-921-655-01	BUTTON (4-6) (XR-6450)	
72	3-921-655-21	BUTTON (4-6) (EXR-21)	
73	3-921-654-01	BUTTON (1-3) (XR-6450)	
73	3-921-654-11	BUTTON (1-3) (EXR-21)	
74	3-921-903-01	BUTTON (2 GANG)	
LCD701	1-810-800-11	DISPLAY PANEL, LIQUID CRYSTAL	

6-3. MECHANISM DECK SECTION
(MG-50EX-39)

SEE ADDITIONAL INFORMATION

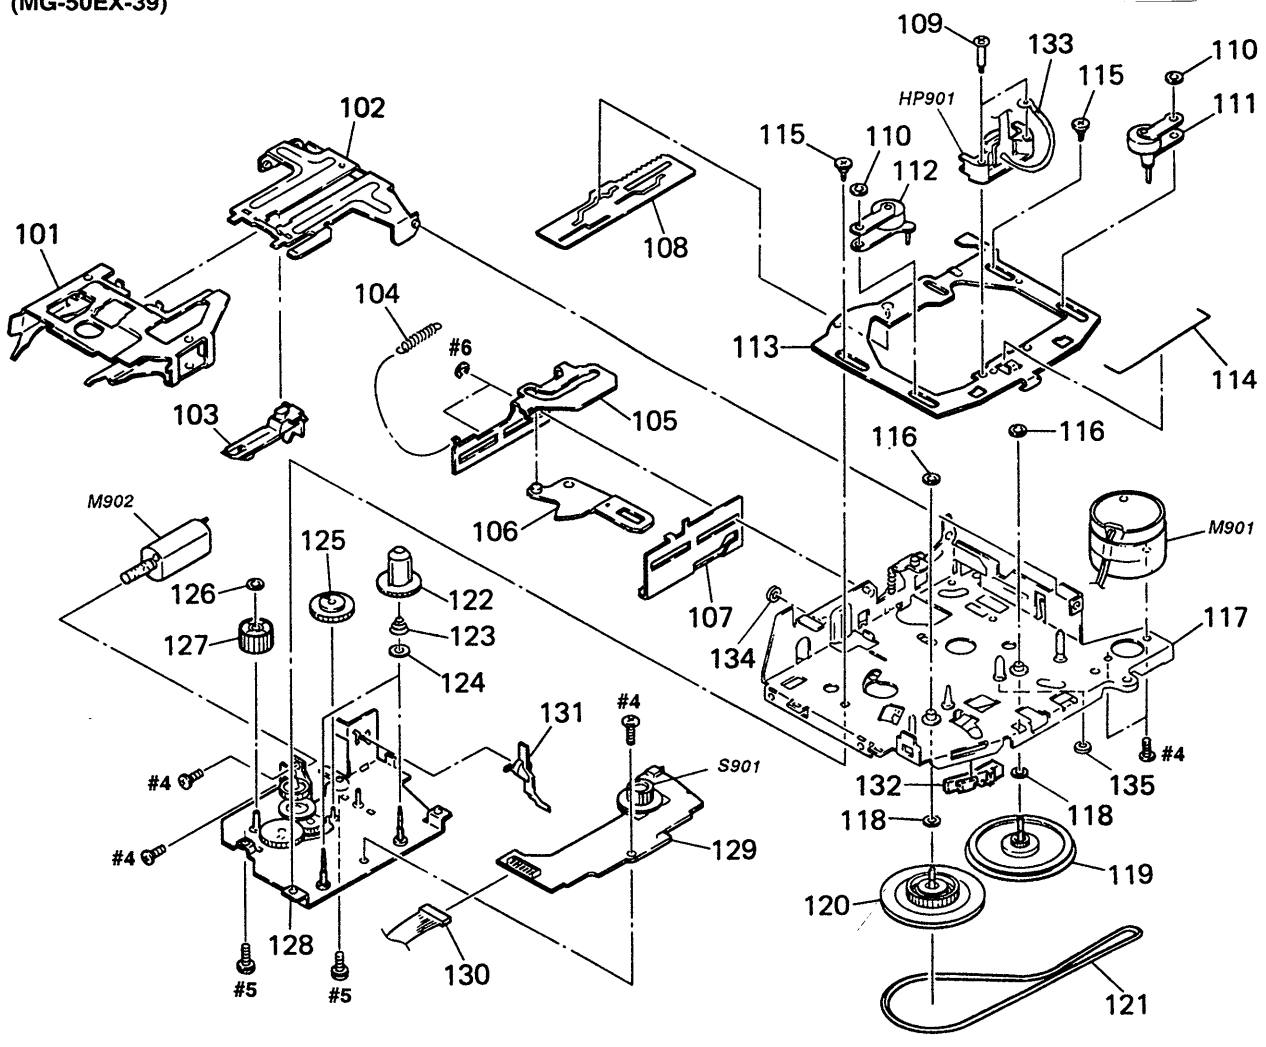

Ref. No.	Part No.	Description	Remark
101	3-912-881-01	HOUSING, CASSETTE	
* 102	3-912-882-01	HANGER, HOUSING	
103	3-912-884-01	CATCHER	
104	3-912-885-01	SPRING (LOADING LEVER), TENSION	
* 105	3-912-892-01	LEVER (B), LOADING	
* 106	3-912-883-01	ARM, SECTION	
* 107	3-922-941-01	LEVER (A2), LOADING	
* 108	3-912-876-01	LEVER, MODE	
109	3-912-893-01	SCREW, HEAD FITTING	
110	3-579-788-01	WASHER, STOPPER	
111	X-3368-266-1	PINCH LEVER (F) ASSY	
112	X-3368-267-1	PINCH LEVER (R) ASSY	
* 113	X-3368-268-1	BASE ASSY, HEAD	
114	3-912-879-01	SPRING, PINCH PRESS	
115	3-912-897-01	SCREW (HB), STEP	
116	3-364-151-01	WASHER	
117	X-3368-841-3	CHASSIS (SV) ASSY (A), MECHANICAL	
118	3-701-437-21	WASHER	
119	3-913-825-01	FLYWHEEL (FZ)	
120	X-3369-124-1	CLUTCH (S) ASSY, FR	

Ref. No.	Part No.	Description	Remark
121	3-912-896-01	BELT	
122	X-3368-843-1	GEAR ASSY, REEL	
123	3-917-222-01	SPRING (B-T), COIL	
124	3-917-324-01	WASHER (B-T)	
125	3-912-888-01	GEAR (LOADING E)	
126	3-321-813-01	WASHER, COTTER POLYETHYLENE	
127	3-912-889-01	GEAR (LOADING F)	
128	X-3368-842-2	BRACKET ASSY, REEL	
129	1-589-604-11	REEL SENSOR BOARD	
130	1-765-460-12	CORD (WITH CONNECTOR)	
131	3-916-358-01	LEVER (TAPE IN 2)	
132	3-919-553-01	GUIDE (BELT)	
* 133	3-917-258-01	PLATE, GROUND	
134	3-315-384-11	WASHER, STOPPER	
135	3-344-223-01	WASHER	
HP901	1-500-196-11	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3368-684-1	MOTOR ASSY, MAIN	
M902	X-3368-685-1	MOTOR ASSY, SUB	
S901	1-692-885-11	SWITCH, ROTARY SLIDE (TAPE OPERATION)	

SECTION 7
ELECTRICAL PARTS LIST

KEY

NOTE :
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms
  METAL : Metal-film resistor
  METAL OXIDE : Metal oxide-film resistor
  F : nonflammable
- Items marked " * "are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : μ , for example :
  uA.... : μ A.... , uPA.... : μ PA....,
  uPB.... : μ PB.... , uPC.... : μ PC....
  uPD.... : μ PD....
- CAPACITORS
  uF : μ F
- COILS
  uH : μ H

When indicating parts by reference number, please include the board.

Ref.No.	Part No.	Description			Remark
*	A-3298-559-A	KEY BOARD, COMPLETE (EXCEPT E)			
*	A-3298-560-A	KEY BOARD, COMPLETE (E)			
		**********			
		< CAPACITOR >			
C701	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C702	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
		< CONNECTOR >			
CNP701	1-764-423-11	PIN, CONNECTOR 12P			
		< DIODE >			
D701-705					
	8-719-422-43	DIODE MA8051-H			
		< IC >			
IC701	8-759-330-60	IC LC75822WD			
		< LIQUID CRYSTAL DISPLAY >			
LCD701	1-810-800-11	DISPLAY PANEL, LIQUID CRYSTAL			
		< SWITCH >			
LSW701	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (EJECT) (EXCEPT E)			
LSW701	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (EJECT) (E)			
LSW702	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (LOUD) (EXCEPT E)			
LSW702	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (LOUD) (E)			
LSW703	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (PRESET -) (EXCEPT E)			
LSW703	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (PRESET -) (E)			
LSW704	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (TAPE) (EXCEPT E)			
LSW704	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (TAPE) (E)			
LSW705	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (AM) (EXCEPT E)			
LSW705	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (AM) (E)			
LSW706	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (FM) (EXCEPT E)			
LSW706	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (FM) (E)			
LSW707	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (SEEK AMS +) (EXCEPT E)			
LSW707	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (SEEK AMS +) (E)			
LSW708	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (LCL) (EXCEPT E)			
LSW708	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (LCL) (E)			
LSW709	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (MONO) (EXCEPT E)			
LSW709	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (MONO) (E)			
LSW710	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (SEEK AMS -) (EXCEPT E)			
LSW710	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (SEEK AMS -) (E)			
LSW711	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (OFF) (EXCEPT E)			
LSW711	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (OFF) (E)			
LSW712	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (BTM) (EXCEPT E)			
LSW712	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (BTM) (E)			
LSW713	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (SEL) (EXCEPT E)			
LSW713	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (SEL) (E)			
LSW714	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (MUTE) (EXCEPT E)			
LSW714	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (MUTE) (E)			
LSW715	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (⊟) (EXCEPT E)			
LSW715	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (⊟) (E)			
LSW716	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (4/MTL) (EXCEPT E)			
LSW716	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (4/MTL) (E)			
LSW717	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (3/⊡) (EXCEPT E)			
LSW717	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (3/⊡) (E)			
LSW718	1-762-142-11	SWITCH, KEY BOARD (WITH LED) (2/REP) (EXCEPT E)			
LSW718	1-762-141-11	SWITCH, KEY BOARD (WITH LED) (2/REP) (E)			

KEY MAIN

Ref.No.	Part No.	Description			Remark
LSW719	1-762-142-11	SWITCH, KEY BOARD (WITH LED)			(6/BL.SKIP) (EXCEPT E)
LSW719	1-762-141-11	SWITCH, KEY BOARD (WITH LED)			(6/BL.SKIP) (E)
LSW720	1-762-142-11	SWITCH, KEY BOARD (WITH LED)			(DSPL) (EXCEPT E)
LSW720	1-762-141-11	SWITCH, KEY BOARD (WITH LED)			(DSPL) (E)
LSW721	1-762-142-11	SWITCH, KEY BOARD (WITH LED)			(BTM) (EXCEPT E)
LSW721	1-762-141-11	SWITCH, KEY BOARD (WITH LED)			(BTM) (E)
LSW722	1-762-142-11	SWITCH, KEY BOARD (WITH LED)			(PRESET +) (EXCEPT E)
LSW722	1-762-141-11	SWITCH, KEY BOARD (WITH LED)			(PRESET +) (E)
LSW723	1-762-142-11	SWITCH, KEY BOARD (WITH LED)			(1/INTRO) (EXCEPT E)
LSW723	1-762-141-11	SWITCH, KEY BOARD (WITH LED)			(1/INTRO) (E)
LSW724	1-762-142-11	SWITCH, KEY BOARD (WITH LED)			(5-ATA) (EXCEPT E)
LSW724	1-762-141-11	SWITCH, KEY BOARD (WITH LED)			(5-ATA) (E)
		< PILOT LAMP >			
PL701	1-517-166-21	LAMP, PILOT (BACK LIGHT) (GREEN)			(EXCEPT E)
PL701	1-517-165-21	LAMP, PILOT (BACK LIGHT) (AMBER)			(E)
PL702	1-517-166-21	LAMP, PILOT (BACK LIGHT) (GREEN)			(EXCEPT E)
PL702	1-517-165-21	LAMP, PILOT (BACK LIGHT) (AMBER)			(E)
		< RESISTOR >			
R701	1-216-093-00	METAL CHIP	68K	5%	1/10W
R702	1-216-041-00	METAL CHIP	470	5%	1/10W
R740-745	1-216-021-00	METAL CHIP	68	5%	1/10W
R751-754	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R755	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R756	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R757-760	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R761	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R762	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R763	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R764-767	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R768	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R769	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R770	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R771	1-216-073-00	METAL CHIP	10K	5%	1/10W
R780-783	1-216-821-11	METAL CHIP	1K	5%	1/16W

****

*	A-3298-556-A	MAIN BOARD, COMPLETE	(XR-6450:US, Canadian)
*	A-3298-557-A	MAIN BOARD, COMPLETE (E)	
*	A-3298-563-A	MAIN BOARD, COMPLETE (EXR-21)	

****

< CAPACITOR >

Ref.No.	Part No.	Description			Remark
C1	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C2-4	1-124-584-00	ELECT	100uF	20%	10V
C5	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C6	1-126-157-11	ELECT	10uF	20%	16V
C7	1-126-157-11	ELECT	10uF	20%	16V
C11	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V (EXCEPT E)
C11	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V (E)
C21	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V (EXCEPT E)
C21	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V (E)
C32	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V (EXCEPT E)
C32	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V (E)
C33	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V (EXCEPT E)
C33	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V (E)
C50	1-124-589-11	ELECT	47uF	20%	16V
C52	1-136-169-00	FILM	0.22uF	5%	50V
C53	1-104-683-11	MYLAR	0.0047uF	5%	50V
C55-58	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C60	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (EXCEPT E)
C60	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V (E)
C61	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C62	1-164-117-00	CERAMIC CHIP	100PF	5%	50V
C70	1-124-234-00	ELECT	22uF	20%	16V (E)
C71	1-163-037-11	CERAMIC CHIP	0.022uF	10%	50V
C99	1-163-001-11	CERAMIC CHIP	220PF	10%	50V
C101	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C102	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C103	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C104	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C105	1-124-464-11	ELECT	0.22uF	20%	50V

SEE ADDITIONAL INFORMATION

MAIN

Ref.No.	Part No.	Description			Remark
C106	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C111	1-126-159-11	ELECT	0.47uF	20%	50V
C112	1-126-159-11	ELECT	0.47uF	20%	50V
C113	1-126-159-11	ELECT	0.47uF	20%	50V
C114	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V
C116	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C117	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C118-119					
	1-126-157-11	ELECT	10uF	20%	16V
C120	1-126-159-11	ELECT	0.47uF	20%	50V
C121	1-124-589-11	ELECT	47uF	20%	16V
C122	1-126-157-11	ELECT	10uF	20%	16V
C125	1-126-163-11	ELECT	4.7uF	20%	50V
C126	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C130	1-126-163-11	ELECT	4.7uF	20%	50V
C131	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C135	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C201	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C202	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C203	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C204	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C205	1-124-464-11	ELECT	0.22uF	20%	50V
C206	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C211-213					
	1-126-159-11	ELECT	0.47uF	20%	50V
C214	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V
C216	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C217	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C218-219					
	1-126-157-11	ELECT	10uF	20%	16V
C220	1-126-159-11	ELECT	0.47uF	20%	50V
C221	1-124-589-11	ELECT	47uF	20%	16V
C222	1-126-157-11	ELECT	10uF	20%	16V
C225	1-126-163-11	ELECT	4.7uF	20%	50V
C226	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C230	1-126-163-11	ELECT	4.7uF	20%	50V
C231	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C235	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C251	1-124-584-00	ELECT	100uF	20%	10V
C252	1-124-463-00	ELECT	0.1uF	20%	50V
C253	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C254	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C255	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C256	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
C257	1-126-301-11	ELECT	1uF	20%	50V
C258	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C301	1-124-584-00	ELECT	100uF	20%	10V
C302	1-124-584-00	ELECT	100uF	20%	10V
C304	1-164-232-11	CERAMIC CHIP	0.01uF		50V

Ref.No.	Part No.	Description			Remark
C310	1-124-589-11	ELECT	47uF	20%	16V
C312	1-124-257-00	ELECT	2.2uF	20%	50V
C401	1-126-157-11	ELECT	10uF	20%	16V
C403	1-124-234-00	ELECT	22uF	20%	16V
C404	1-126-103-11	ELECT	470uF	20%	16V
C410	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C411	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C412	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C501	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C502	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C509	1-126-157-11	ELECT	10uF	20%	16V (XR-6450)
C514	1-163-224-11	CERAMIC CHIP	7PF	0.25PF	50V
C515	1-163-224-11	CERAMIC CHIP	7PF	0.25PF	50V
C520	1-163-173-00	CERAMIC CHIP	47PF	5%	50V
C570	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C571	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C573	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C574	1-125-705-11	CAP, DOUBLE LAYERS			0.22F
C575	1-124-584-00	ELECT	100uF	20%	10V
C600	1-126-157-11	ELECT	10uF	20%	16V
C601	1-124-234-00	ELECT	22uF	20%	16V
C602	1-128-195-11	ELECT	39uF	20%	25V
C603	1-124-126-00	ELECT	47uF	20%	16V
C604	1-124-126-00	ELECT	47uF	20%	16V
C651	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C901	1-126-936-11	ELECT	3300uF	20%	16V
C903	1-136-173-00	FILM	0.47uF	5%	50V
C904	1-126-157-11	ELECT	10uF	20%	16V
C905	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C906	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C907	1-126-157-11	ELECT	10uF	20%	16V
C911-914					
	1-136-165-00	FILM	0.1uF	5%	50V
C921-924					
	1-136-165-00	FILM	0.1uF	5%	50V
C932	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C933	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C934	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C941	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C999	1-126-163-11	ELECT	4.7uF	20%	50V

< CONNECTOR >

CN250	1-766-260-31	CONNECTOR, FFC/FPC (ZIF) 7P	
* CN401	1-506-995-11	PIN, CONNECTOR (PC BOARD) 13P	
CN571	1-764-422-11	PLUG, CONNECTOR 12P	
CN900	1-764-426-11	PLUG, CONNECTOR 15P	

MAIN

Ref.No.	Part No.	Description	Remark
		< JACK >	
CNJ951	1-764-424-41	JACK, PIN 2P	
		< COMPOSITION CIRCUIT BLOCK >	
CP1	1-519-504-11	GAP, DISCHARGE	
		< DIODE >	
D1	8-719-040-04	DIODE MA721WK (TX)	
D2	8-719-034-30	DIODE MA4047-M (QZ)	
D50	8-719-034-63	DIODE MA4091-H (QZ)	
D301	8-719-901-33	DIODE 1SS133	
D310	8-719-034-22	DIODE MA4039-M (QZ)	
D311	8-719-901-33	DIODE 1SS133	
D403	8-719-034-63	DIODE MA4091-H (QZ)	
D405	8-719-901-33	DIODE 1SS133	
D501	8-719-901-33	DIODE 1SS133	
D550	8-719-034-46	DIODE MA4062-M (QZ)	
D570-577			
	8-719-034-46	DIODE MA4062-M (QZ)	
D581	8-719-034-69	DIODE MA4110-L (QZ)	
D582	8-719-901-33	DIODE 1SS133	
D651	8-719-914-43	DIODE DAN202K	
D653	8-719-422-76	DIODE MA8075-M	
D660	8-719-018-04	DIODE MA8240-TX	
D901	8-719-049-38	DIODE 1N5404TU	
D902	8-719-034-46	DIODE MA4062-M (QZ)	
		< IC >	
IC250	8-759-161-01	IC HA12164	
IC301	8-759-330-62	IC LC75383ED	
IC401	8-759-823-87	IC LB1638M	
IC501	8-759-330-61	IC LC72358-8910	
IC601	8-759-182-76	IC BA3910B-V3	
IC901	8-759-279-87	IC HA13151A	
		< JACK >	
J1	1-764-808-13	JACK (ANT)	
J501	1-566-822-41	JACK (NEW ROTARY COMMANDER)	
		< JUMPER RESISTOR >	
JC1-6	1-216-295-00	METAL CHIP 0 5% 1/10W	
JC6	1-216-295-00	METAL CHIP 0 5% 1/10W	
JC7	1-216-295-00	METAL CHIP 0 5% 1/10W (XR-6450)	
JC8-13	1-216-295-00	METAL CHIP 0 5% 1/10W	
JC51-53			
	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC54	1-216-296-00	METAL CHIP 0 5% 1/8W (E)	
JC55-57			
	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC59-74			
	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC76	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC503	1-216-295-00	METAL CHIP 0 5% 1/10W (EXR-21)	
JC504	1-216-295-00	METAL CHIP 0 5% 1/10W (E)	
JC505	1-216-295-00	METAL CHIP 0 5% 1/10W (EXR-21)	
		< TRANSISTOR >	
Q50	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q53	8-729-424-08	TRANSISTOR UN2111	
Q54	8-729-021-94	TRANSISTOR 2SK1657-T1B	
Q120	8-729-920-21	TRANSISTOR DTC314TKH04	
Q130	8-729-920-21	TRANSISTOR DTC314TKH04	
Q220	8-729-920-21	TRANSISTOR DTC314TKH04	
Q230	8-729-920-21	TRANSISTOR DTC314TKH04	
Q310	8-729-424-08	TRANSISTOR UN2111	
Q311	8-729-421-22	TRANSISTOR UN2211	
Q401	8-729-015-11	TRANSISTOR 2SD1802-FAST-TL	
Q402	8-729-424-08	TRANSISTOR UN2111	
Q403	8-729-106-60	TRANSISTOR 2SB1115A-YQ	
Q404	8-729-421-22	TRANSISTOR UN2211	
Q406	8-729-421-22	TRANSISTOR UN2211	
Q501	8-729-026-50	TRANSISTOR 2SA1037AK-T146-QR	
Q502	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q503	8-729-421-22	TRANSISTOR UN2211	
Q571	8-729-424-08	TRANSISTOR UN2111	
Q572	8-729-030-18	TRANSISTOR 2SD2525	
Q651	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		< RESISTOR >	
R1	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R2	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R3	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R4	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R6	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R7	1-216-246-91	METAL GLAZE 100K 5% 1/8W	
R8	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R11	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R12	1-216-077-00	METAL CHIP 15K 5% 1/10W	(EXCEPT E)
R12	1-216-089-00	METAL CHIP 47K 5% 1/10W (E)	
R21	1-216-222-00	METAL GLAZE 10K 5% 1/8W	
R22	1-216-077-00	METAL CHIP 15K 5% 1/10W	(EXCEPT E)
R22	1-216-089-00	METAL CHIP 47K 5% 1/10W (E)	
R31	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R32	1-216-081-00	METAL CHIP 22K 5% 1/10W	

Ref.No.	Part No.	Description			Remark
R50	1-216-049-00	METAL CHIP	1K	5%	1/10W
R52	1-216-049-00	METAL CHIP	1K	5%	1/10W
R53	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R54	1-249-421-11	CARBON	2.2K	5%	1/4W
R55	1-216-061-00	METAL CHIP	3.3K	5%	1/10W (E)
R60	1-216-025-00	METAL CHIP	100	5%	1/10W
R70	1-247-831-11	CARBON	1K	5%	1/4W (E)
R101	1-216-109-00	METAL CHIP	330K	5%	1/10W
R102	1-216-109-00	METAL CHIP	330K	5%	1/10W
R103	1-216-079-00	METAL CHIP	18K	5%	1/10W
R104	1-216-076-00	METAL CHIP	13K	5%	1/10W
R105	1-216-109-00	METAL CHIP	330K	5%	1/10W
R108	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R109	1-216-093-00	METAL CHIP	68K	5%	1/10W
R120	1-216-073-00	METAL CHIP	10K	5%	1/10W
R121	1-216-049-00	METAL CHIP	1K	5%	1/10W
R122	1-216-073-00	METAL CHIP	10K	5%	1/10W
R123	1-216-093-00	METAL CHIP	68K	5%	1/10W
R124	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R130	1-216-073-00	METAL CHIP	10K	5%	1/10W
R131	1-216-049-00	METAL CHIP	1K	5%	1/10W
R132	1-216-073-00	METAL CHIP	10K	5%	1/10W
R133	1-216-093-00	METAL CHIP	68K	5%	1/10W
R134	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R201	1-216-109-00	METAL CHIP	330K	5%	1/10W
R202	1-216-109-00	METAL CHIP	330K	5%	1/10W
R203	1-216-079-00	METAL CHIP	18K	5%	1/10W
R204	1-216-076-00	METAL CHIP	13K	5%	1/10W
R205	1-216-109-00	METAL CHIP	330K	5%	1/10W
R208	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R209	1-216-093-00	METAL CHIP	68K	5%	1/10W
R220	1-216-073-00	METAL CHIP	10K	5%	1/10W
R221	1-216-049-00	METAL CHIP	1K	5%	1/10W
R222	1-216-073-00	METAL CHIP	10K	5%	1/10W
R223	1-216-093-00	METAL CHIP	68K	5%	1/10W
R224	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R230	1-216-073-00	METAL CHIP	10K	5%	1/10W
R231	1-216-049-00	METAL CHIP	1K	5%	1/10W
R232	1-216-073-00	METAL CHIP	10K	5%	1/10W
R233	1-216-093-00	METAL CHIP	68K	5%	1/10W
R234	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R251	1-216-113-00	METAL CHIP	470K	5%	1/10W
R252	1-216-109-00	METAL CHIP	330K	5%	1/10W
R253	1-216-097-00	METAL CHIP	100K	5%	1/10W
R254	1-216-085-00	METAL CHIP	33K	5%	1/10W
R255	1-216-079-00	METAL CHIP	18K	5%	1/10W
R256	1-216-079-00	METAL CHIP	18K	5%	1/10W
R257	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R258	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref.No.	Part No.	Description			Remark
R259	1-216-073-00	METAL CHIP	10K	5%	1/10W (XR-6450)
R260	1-249-429-11	CARBON	10K	5%	1/4W
R310	1-216-017-00	METAL CHIP	47	5%	1/10W
R401	1-216-049-00	METAL CHIP	1K	5%	1/10W
R402	1-249-389-11	CARBON	4.7	5%	1/4W
R403	1-249-389-11	CARBON	4.7	5%	1/4W
R404	1-216-073-00	METAL CHIP	10K	5%	1/10W
R405	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R501	1-216-073-00	METAL CHIP	10K	5%	1/10W
R502	1-216-081-00	METAL CHIP	22K	5%	1/10W
R503	1-216-246-91	METAL GLAZE	100K	5%	1/8W
R504	1-216-081-00	METAL CHIP	22K	5%	1/10W
R506-508	1-249-421-11	CARBON	2.2K	5%	1/4W
R509	1-216-073-00	METAL CHIP	10K	5%	1/10W
R510	1-216-246-91	METAL GLAZE	100K	5%	1/8W
R511	1-216-073-00	METAL CHIP	10K	5%	1/10W
R512	1-216-097-00	METAL CHIP	100K	5%	1/10W
R513	1-216-246-91	METAL GLAZE	100K	5%	1/8W
R514-520	1-216-097-00	METAL CHIP	100K	5%	1/10W
R522-525	1-249-421-11	CARBON	2.2K	5%	1/4W
R530	1-216-073-00	METAL CHIP	10K	5%	1/10W (XR-6450)
R534	1-216-097-00	METAL CHIP	100K	5%	1/10W
R535	1-216-073-00	METAL CHIP	10K	5%	1/10W
R536	1-216-073-00	METAL CHIP	10K	5%	1/10W
R570	1-216-049-00	METAL CHIP	1K	5%	1/10W
R575-577	1-247-807-31	CARBON	100	5%	1/4W
R582	1-216-186-00	METAL GLAZE	330	5%	1/8W
R587-590	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R650	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R651	1-216-073-00	METAL CHIP	10K	5%	1/10W
R652	1-216-097-00	METAL CHIP	100K	5%	1/10W
R653	1-216-089-00	METAL CHIP	47K	5%	1/10W
R654	1-216-089-00	METAL CHIP	47K	5%	1/10W
R655	1-216-085-00	METAL CHIP	33K	5%	1/10W
R660	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R661	1-216-695-11	METAL CHIP	68K	0.5%	1/10W
R662	1-216-675-11	METAL CHIP	10K	0.5%	1/10W
R901	1-249-429-11	CARBON	10K	5%	1/4W
R902	1-249-429-11	CARBON	10K	5%	1/4W
R911-914	1-249-385-11	CARBON	2.2	5%	1/6W
R921-924	1-249-385-11	CARBON	2.2	5%	1/6W

MAIN REEL SENSOR

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description	Remark
		< VARIABLE RESISTOR >	
RV101	1-238-597-11	RES, ADJ, CARBON 1K	
RV201	1-238-597-11	RES, ADJ, CARBON 1K	
		< SWITCH >	
S501	1-571-478-11	SWITCH, SLIDE (P-SEL. SW)	
S502	1-571-478-11	SWITCH, SLIDE (9k/10k) (E)	
S550	1-692-431-21	SWITCH, TACTILE (RESET SW)	
		< TUNER UNIT >	
TU1	A-3282-003-A	TUNER UNIT	TUX-001A (EXCEPT E)
TU1	A-3282-009-A	TUNER UNIT	TUX-004A (E)
		< VIBRATOR >	
X501	1-578-785-31	VIBRATOR, CRYSTAL (4.5MHz)	
**********			
	1-589-604-11	REEL SENSOR BOARD	
		**********	
		< SWITCH >	
S901	1-692-885-12	SWITCH, ROTARY SLIDE (TAPE OPERATION)	
**********			
		MISCELLANEOUS	
		**********	
15	1-765-082-11	CORD (WITH CONNECTOR) (POWER, SPEAKER) (including F901, 902)	
130	1-765-460-12	CORD (WITH CONNECTOR)	
HP901	1-500-196-11	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3368-684-1	MOTOR ASSY, MAIN	
M902	X-3368-685-1	MOTOR ASSY, SUB	
S901	1-692-885-11	SWITCH, ROTARY SLIDE	
F901	1-533-326-11	FUSE (BLADE TYPE) (AUTO FUSE) (3A)	
F902	1-533-331-11	FUSE (BLADE TYPE) (AUTO FUSE) (15A)	
**********			
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-765-082-11	CORD (WITH CONNECTOR) (POWER, SPEAKER) (including F901, 902)	
	3-798-550-11	MANUAL, INSTRUCTION (ENGLISH, SPANISH, CHINESE) (XR-6450:E)	
	3-798-550-21	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (XR-6450:US, Canadian)	
	3-798-551-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, CHINESE) (XR-6450:E)	
	3-798-551-21	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH) (XR-6450:US, Canadian)	
	3-798-671-21	MANUAL, INSTRUCTION (ENGLISH, SPANISH, CHINESE) (EXR-21)	
	3-798-672-21	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, CHINESE) (EXR-21)	

****

****
HARDWARE LIST
****

#1	7-621-772-10	SCREW +B 2×4
#2	7-621-773-87	SCREW +PTT 2.6×10 (S)
#3	7-685-106-19	SCREW +P 2×10 TYPE2 NON-SLIT
#4	7-627-553-17	PRECISION SCREW +P 2×2 TYPE 3
#5	7-628-253-05	SCREW +PS 2×4
#6	7-624-104-04	STOP RING 2.0, TYPE -E

****

MOUNTING HARDWARE

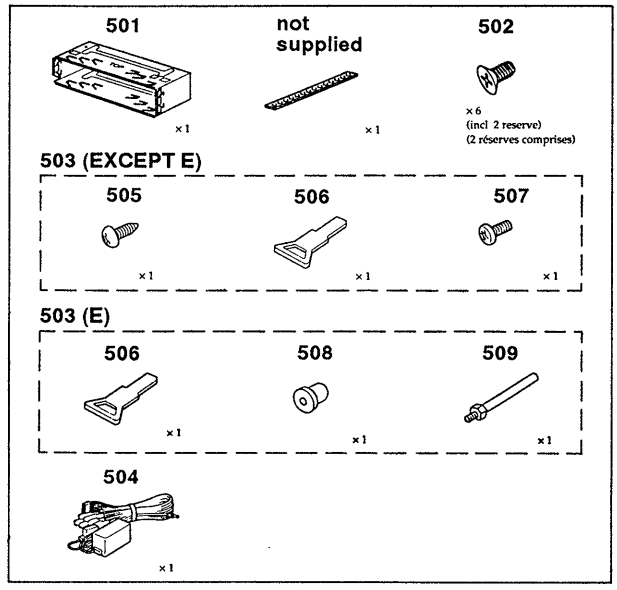

*	501	3-916-161-01	FRAME, FITTING
	502	X-3369-934-1	SCREW ASSY (J), FITTING
	503	X-3370-076-1	SCREW ASSY (KEY), FITTING (EXCEPT E)
	503	X-3370-077-1	SCREW ASSY (KEY), FITTING (E)
	504	1-765-082-11	CORD (WITH CONNECTOR) (POWER, SPEAKER) (including F901, 902)
	505	7-682-560-04	SCREW +P 4×6 (EXCEPT E)
	506	3-388-078-01	KEY
	507	3-915-917-01	SCREW (4×12), +T (EXCEPT E)
	508	3-349-410-01	BUSHING (E)
	509	3-386-828-01	SCREW, FITTING (E)

9-959-940-11

Sony Corporation
Mobile Electronics Company

English
95B027043-1
Printed in Singapore
©1995.2
Published by Home A&V Products Div.
Quality Engineering Dept.

EXR-21/XR-6450

SONY

SERVICE MANUAL

US Model
EXR-21

US Model
Canadian Model
E Model
XR-6450

SUPPLEMENT-1

File this Supplement with the Service Manual.

Subject :

1. CORRECTION

2. CHANGE OF MAIN BOARD

(ECN-CS500019)

1. CORRECTION

Correct your service manual as shown below.

☛ : **Indicates corrected portion**

Page 18

ELECTRICAL ADJUSTMENT

High Cut Control Effect Adjustment

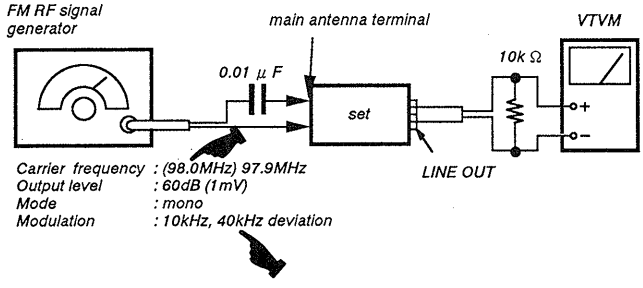

Page. 24

PRINTED WIRING BOARD

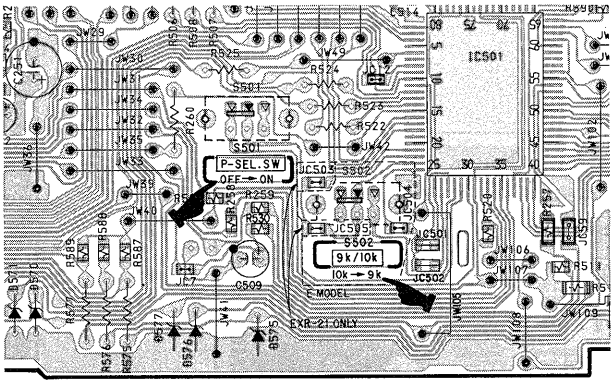

Page 35

EXPLODED VIEWS

	Incorrect		Correct	
Ref. No.	Part No.	Description	Part No.	Description
134	3-315-384-11	WASHER, STOPPER	3-344-223-01	WASHER
135	3-344-223-01	WASHER	3-315-384-11	WASHER, STOPPER

2. CHANGE OF MAIN BOARD

The main board have been changed.

Main section printed wiring boards and schematic diagram of new type, and changed parts list are described in this Supplement-1.

Refer to original service manual previously issued for the other information.

NEW TYPE IDENTIFICATION

– **MAIN board** (Component Side) –

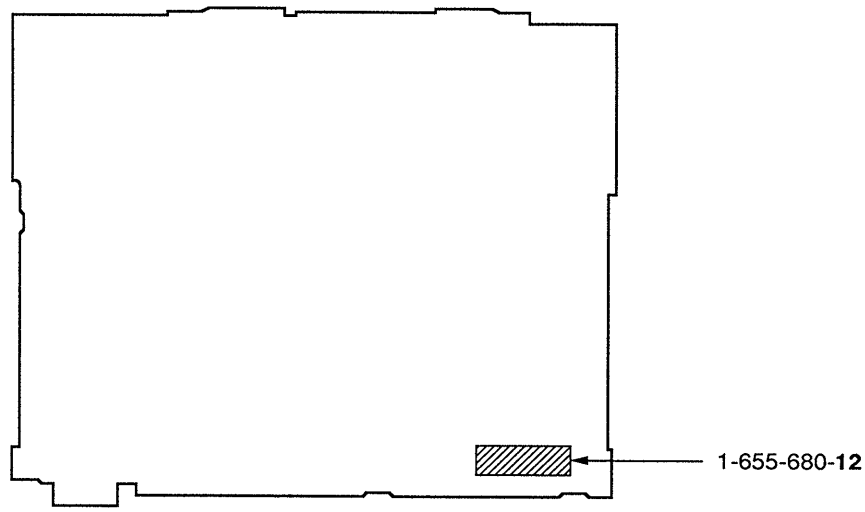

2-1. CHANGED ELECTRICAL PARTS LIST

MAIN

Ref. No.	Former Type					New Type					Remark
	Part No.	Description				Part No.	Description				
C514	1-163-224-11	CERAMIC CHIP	7PF	0.25PF	50V	1-163-092-00	CERAMIC CHIP	9PF	0.25PF	50V	Changed
C515	1-163-224-11	CERAMIC CHIP	7PF	0.25PF	50V	1-163-092-00	CERAMIC CHIP	9PF	0.25PF	50V	Changed
C660		———				1-126-163-11	ELECT	4.7uF	20%	35V	Added
C999	1-126-163-11	ELECT	4.7uF	20%	50V		———				Deleted
R8	1-216-049-00	METAL CHIP	1K	5%	1/10W		———				Deleted

● SEMICONDUCTOR LOCATION

Ref. No.	Location
D1	D - 10
D2	D - 9
D50	C - 10
D301	E - 12
D310	C - 12
D311	C - 13
D403	D - 14
D405	D - 15
D501	D - 14
D550	G - 15
D570	G - 11
D571	G - 11
D572	G - 11
D573	G - 11
D574	G - 11
D575	G - 12
D576	G - 12
D577	G - 12
D581	D - 13
D582	C - 15
D651	B - 14
D653	B - 15
D660	D - 13
D701	H - 2
D702	H - 4
D703	H - 2
D704	H - 2
D705	H - 2
D901	B - 14
D902	C - 13
IC250	E - 10
IC301	D - 12
IC401	D - 15
IC501	E - 13
IC601	C - 15
IC701	H - 4
IC901	B - 12
Q50	D - 10
Q53	D - 10
Q54	D - 10
Q120	D - 10
Q130	D - 10
Q220	C - 10
Q230	C - 11
Q310	C - 12
Q311	C - 12
Q401	D - 14
Q402	D - 14
Q403	D - 14
Q404	D - 14
Q406	D - 14
Q501	D - 13
Q502	D - 14
Q503	D - 13
Q571	D - 13
Q572	D - 13
Q651	B - 15

Note:

- ○— : parts extracted from the component side.
- ■ : parts mounted on the conductor side.
- ● : Through hole.
- ▒ : Pattern from the side which enables seeing. (The other layers' patterns are not indicated)

Caution :

Pattern face side : (Conductor Side) Parts on the pattern face side seen from the pattern face are indicated.
Parts face side : (Component side) Parts on the parts face side seen from the parts face are indicated.

2-2. PRINTED WIRING BOARD

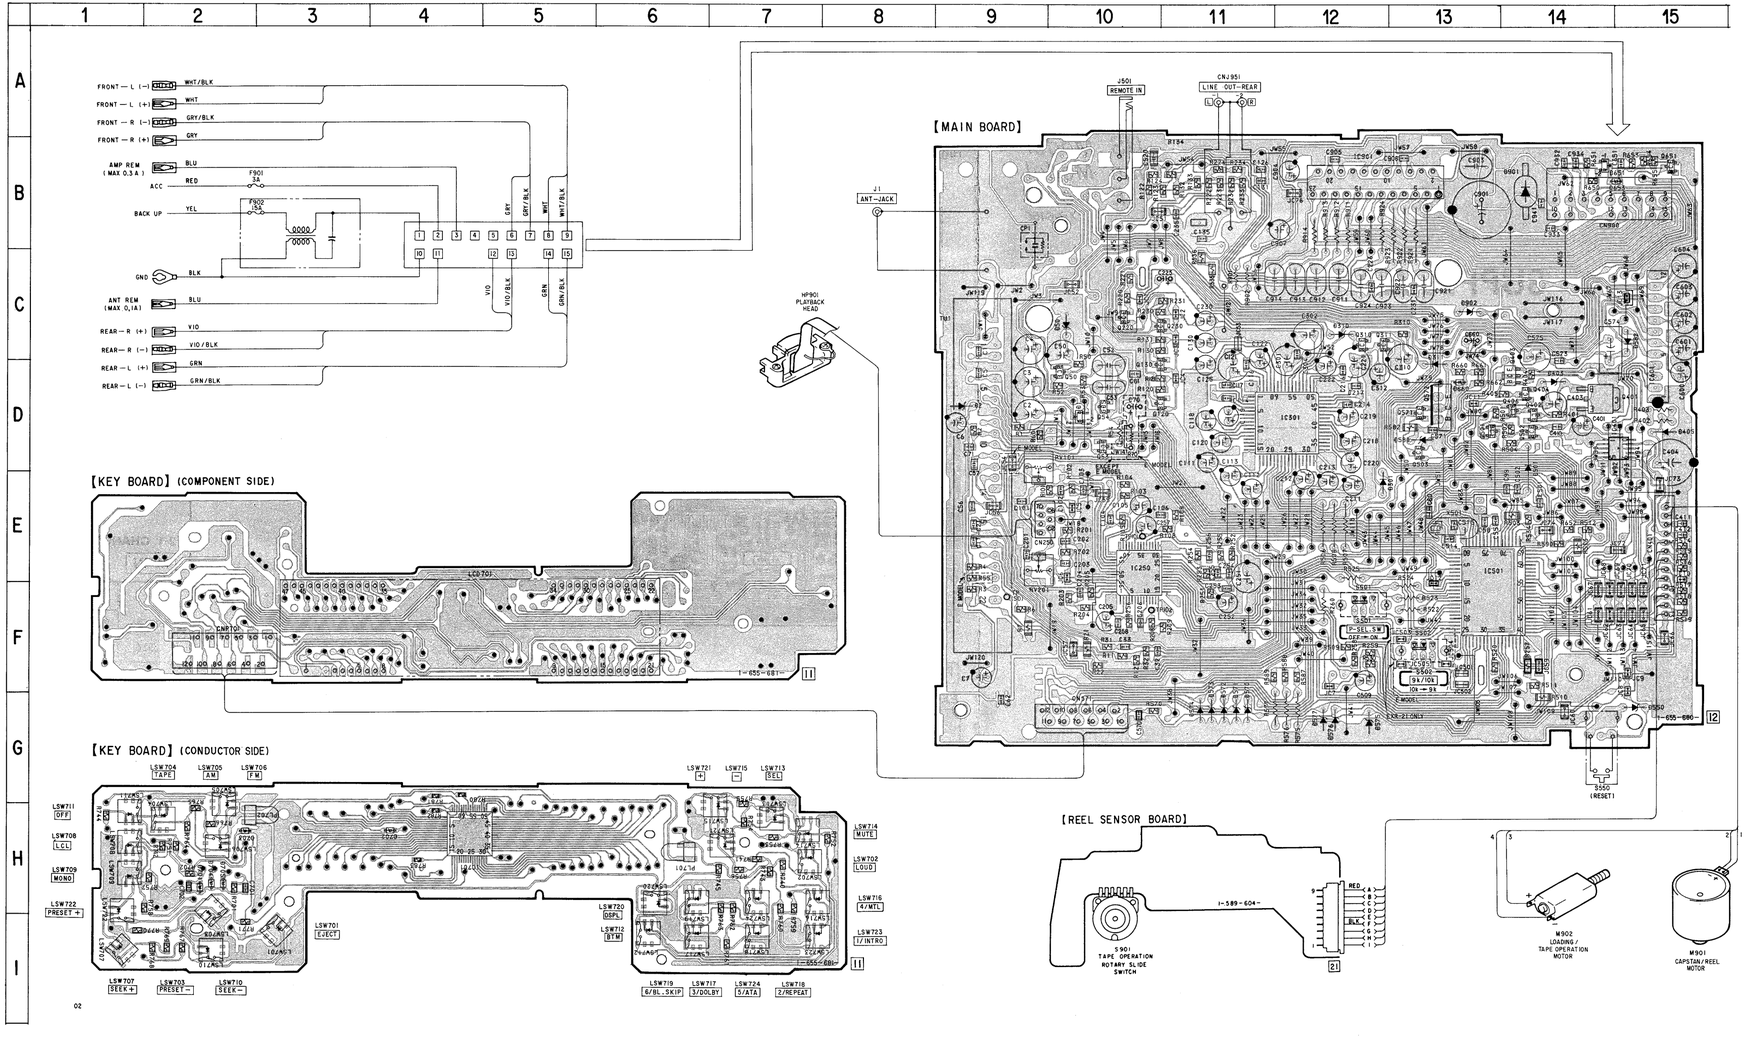

2-3. SCHEMATIC DIAGRAM

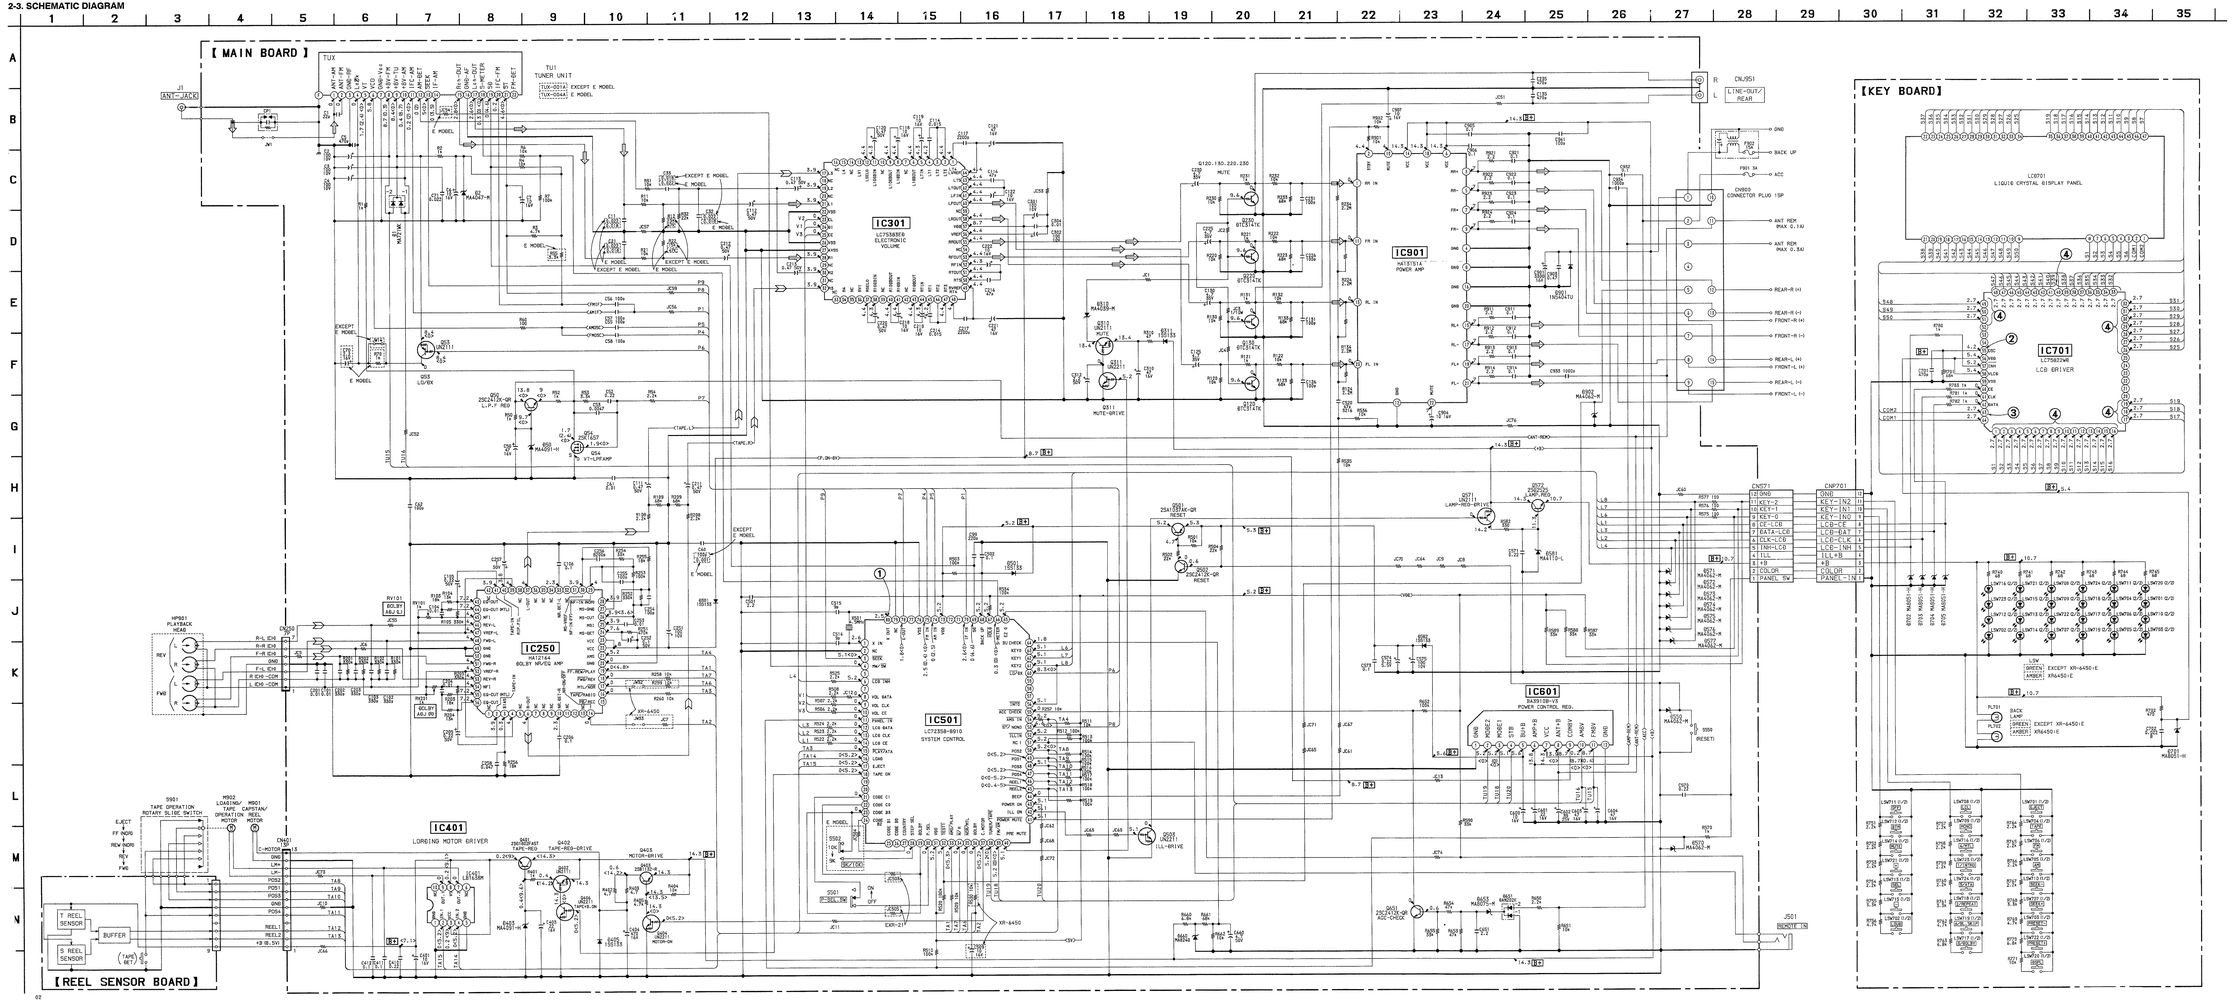

9-959-940-81

Sony Corporation
Mobile Electronics Company

English
95D0244-1
Printed in Singapore
© 1995.4
Published by Home A&V Products Div.
Quality Engineering Dept.

EXR-21/XR-6450

SONY

SERVICE MANUAL

US Model
EXR-21
US Model
Canadian Model
E Model
XR-6450

SUPPLEMENT-2

File this supplement with the service manual.

Subject : Type of rotary commander has been added.

(ENG-96006)

Type of rotary commander RM-X2S has been added.
This type was added the following parts as against former type.

Page 40

ACCESSORIES & PACKING MATERIALES

Part No.	Description
1-473-067-31	ROTARY COMMANDER RM-X2S (XR-6450:E)
3-798-880-11	MANUAL, INSTRUCTION (FOR RM-X2S) (English/French/Germany/Spanish/Dutch/Swedish/Italian/Portuguese/Chinese) (XR-6450:E)
X-3369-817-1	BRACKET ASSY (FOR RM-X2S) (XR-6450:E)

9-959-940-82

Sony Corporation
Personal & Mobile Communication Company

English
96F0434-1D
Printed in Japan
©1996.6
Published by Quality Assurance Dept.